




HARVIA BLOCK- manual

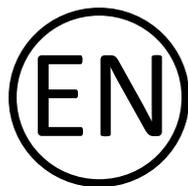


Necessary tools and symbols

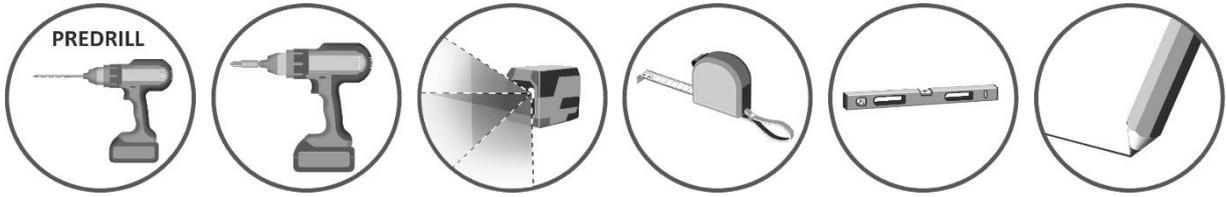

BLOCK BENCH MODELS

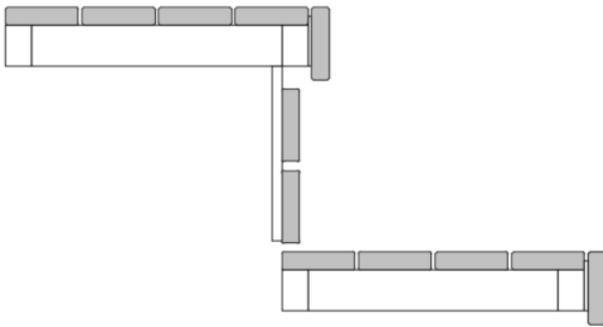


EXTEND

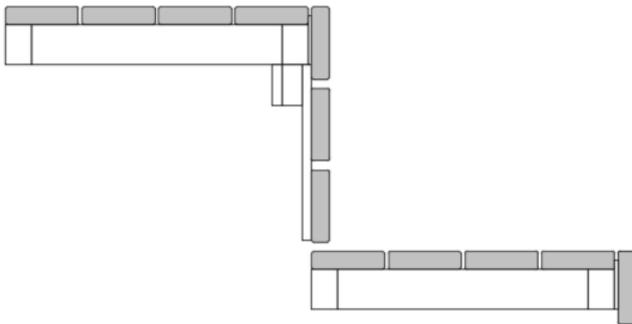


BOX



AIR

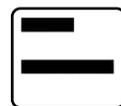


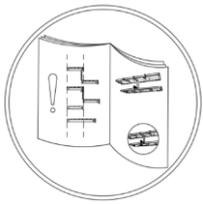


VONTENT:

BENCH HEIGHTS	4
INSTALLATION OF BENCH FRAMES	4
INSTALLTION OF LOWER BENCH	5
SUPPORTING OF BENCHES	7
BENCH SKIRTS	8
BENCH DECKS	8
BACK RESTS	9
FOOTREST	10
STOOLS	11
CORNER BENCHES	11
BENCH FRAMES	12
SUPPORTIVE LEGS	13
LOWER BENCHES	13
BENCH SKIRTS	14
BENCH DECKS	14
BACK RESTS	15
FOOTREST	16
ROUNDING OF BENCH	17
ROUNDING OF BENCH SKIRT	18
ROUNDING OF BACK REST	19
DECORATIVE BENCH END	20
ARM REST	21
LED-LIGHTS	22





BENCH HEIGHTS

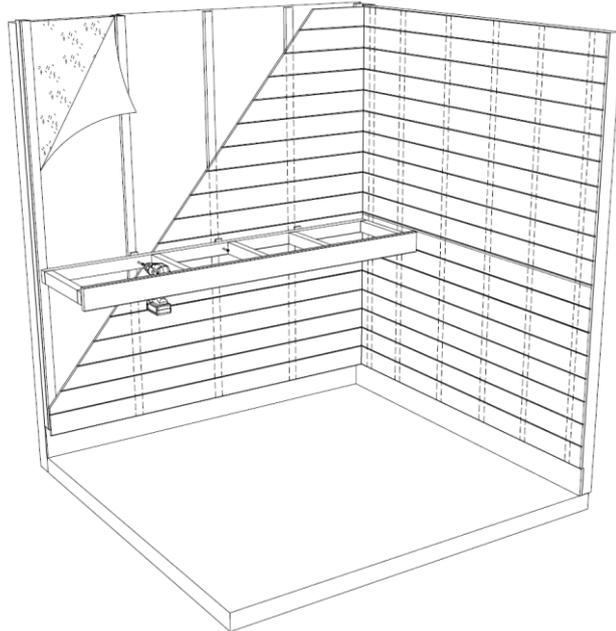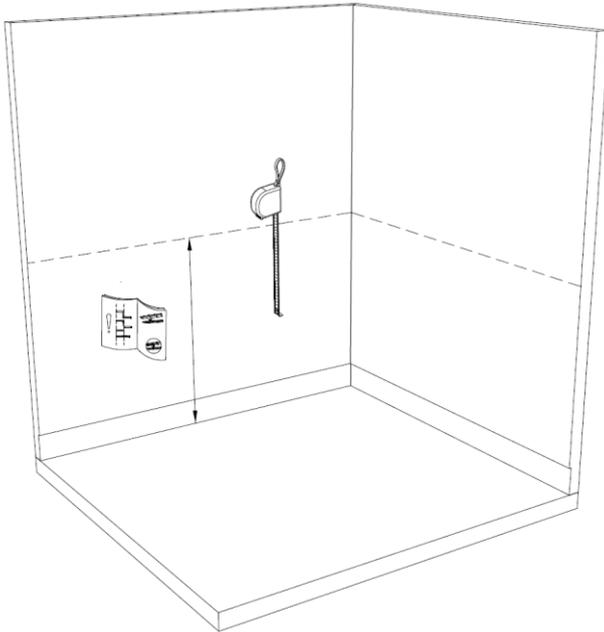



Check bench heights from offer. Measure and mark level of upper bench frames. Notice, that bench frame is 28mm below bench deck top! Install upper benches onto frames behind wall panels.



INSTALLATION OF BENCH FRAMES

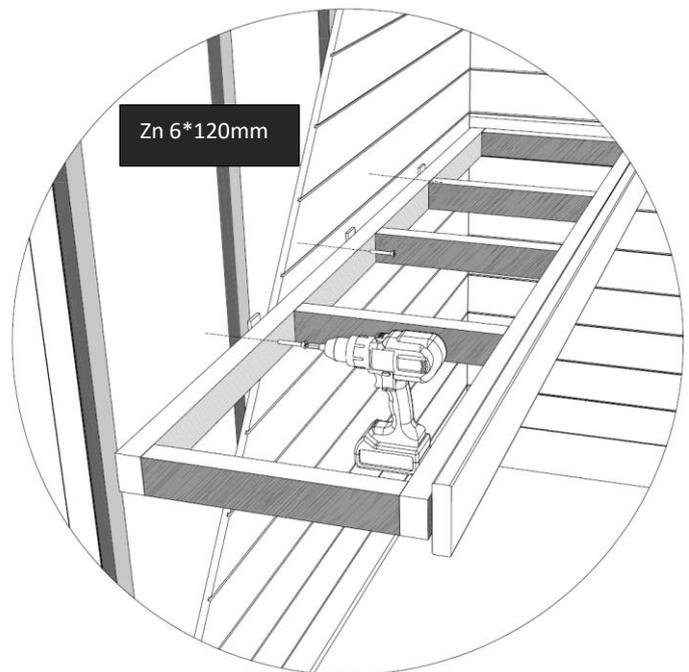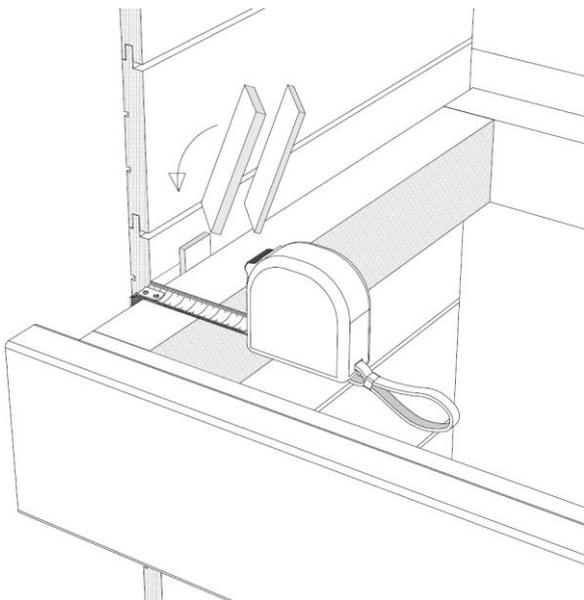



Measure the distance between bench frames and side walls. Fill up the gap with plywood pieces (4mm / 6mm). Screw bench frame onto frames behind panels.

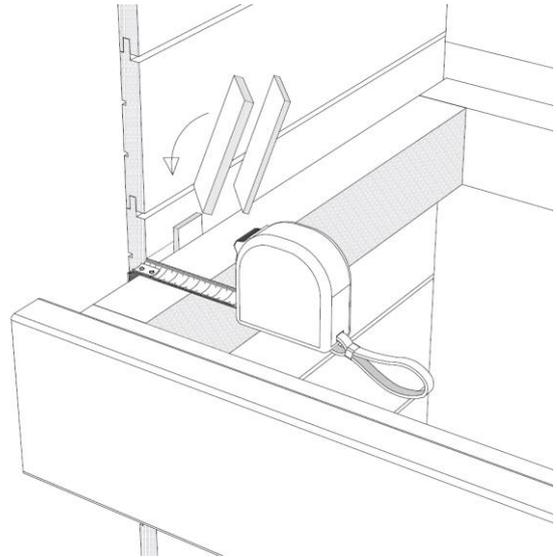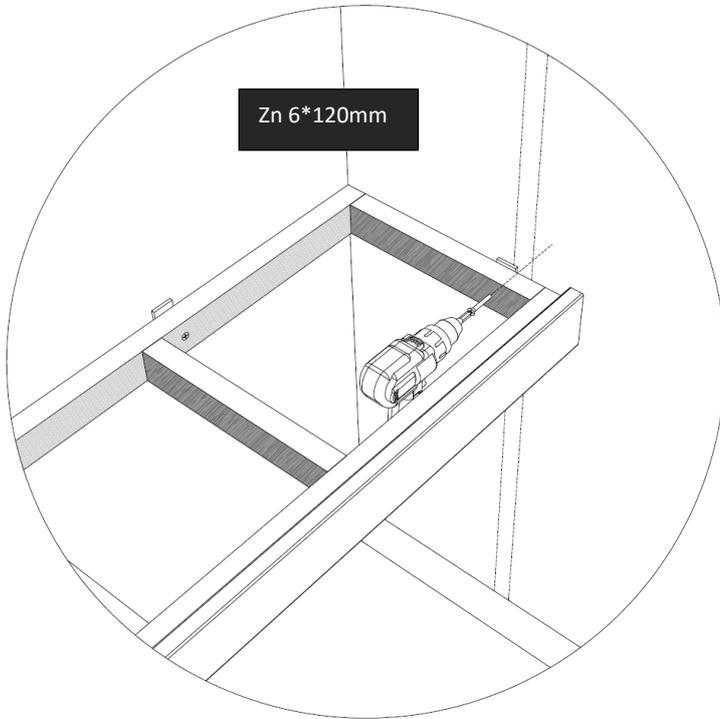


Install upper bench frame also from side. Remember to use plywood pieces in the middle!





INSTALLATION OF LOWER BWNCH

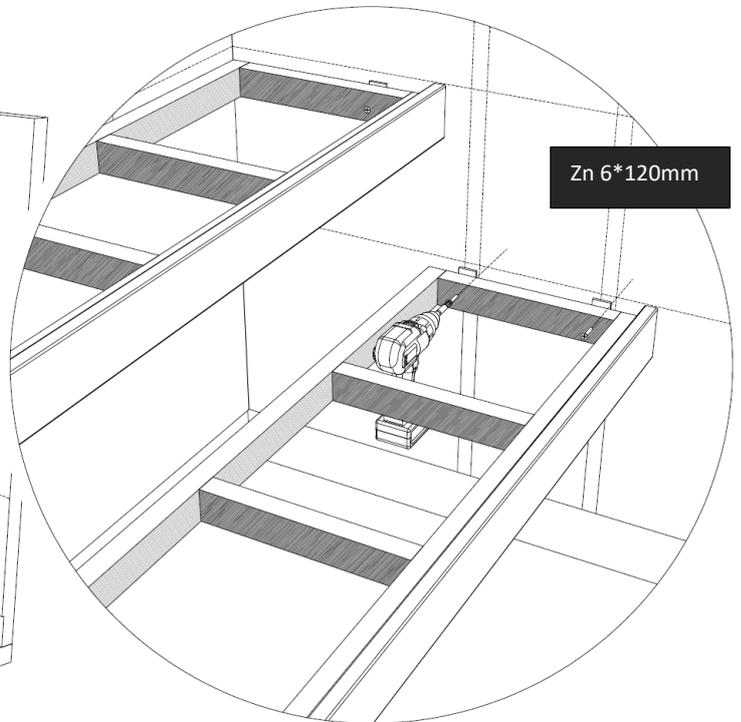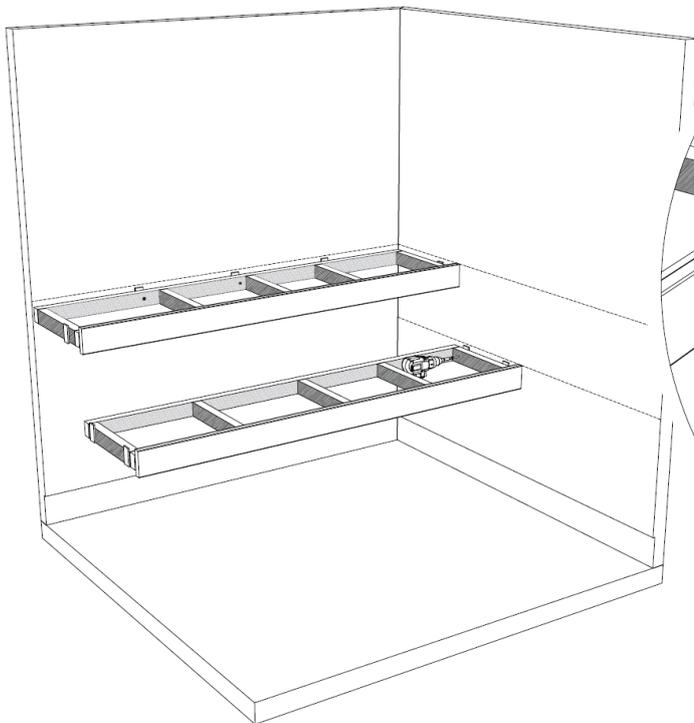


Measure and mark place of the lower bench. Check right position from the offer or in the picture below, which is showing the right position of lower bench relating upper bench.

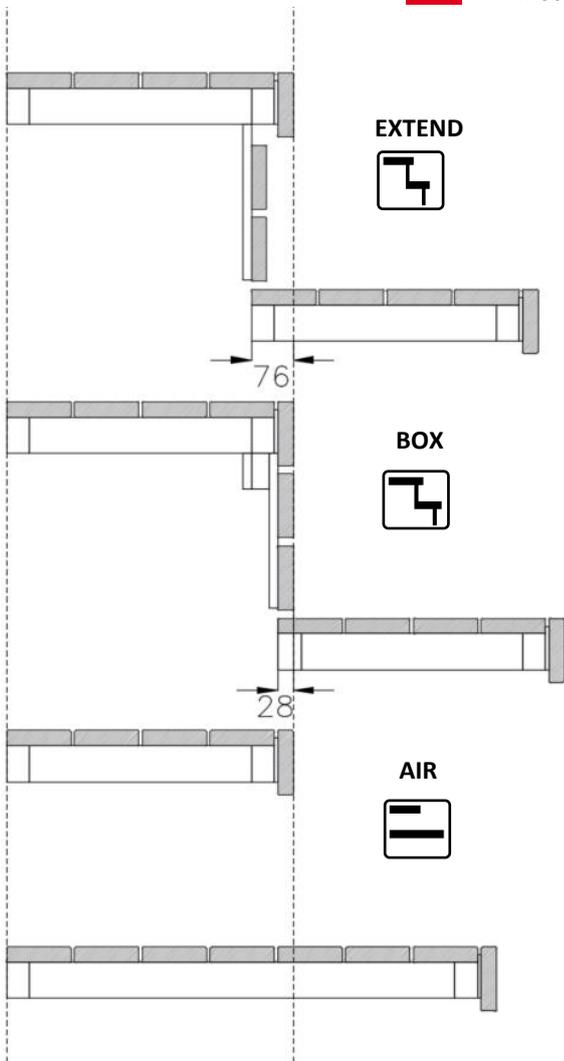

Depth position of lower bench must be measured from upper bench!

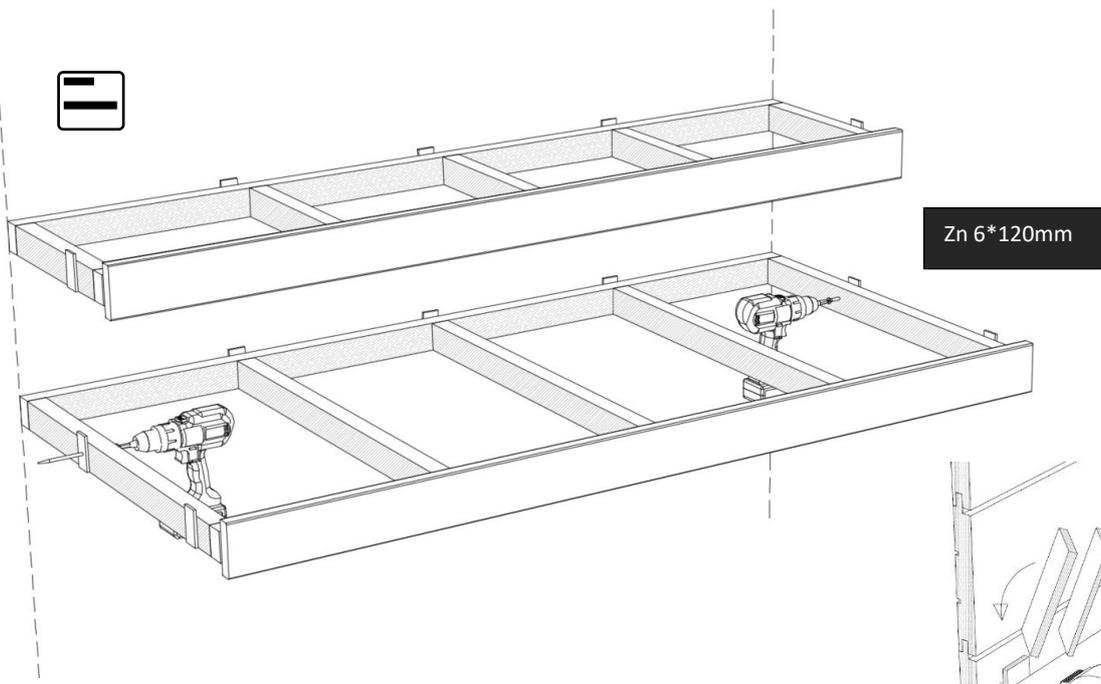
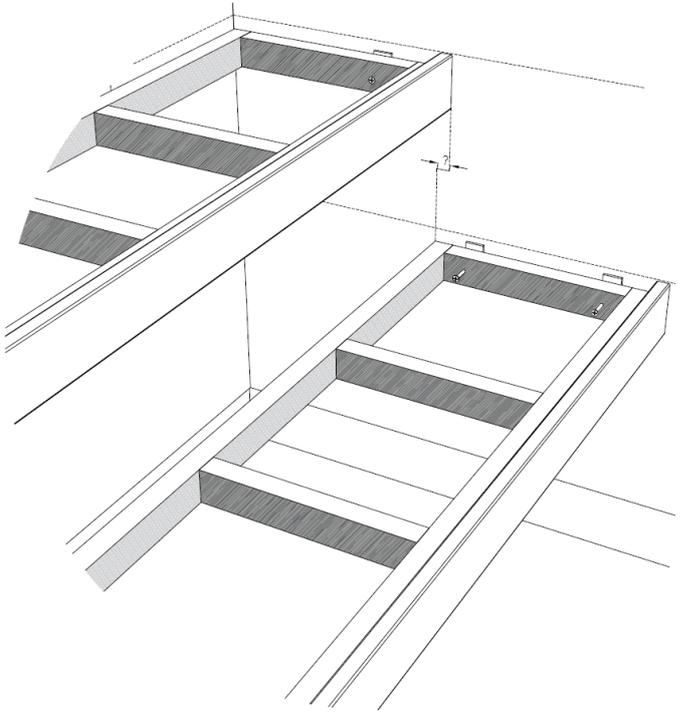


NOTICE! In AIR-model lower bench starts from the back wall.

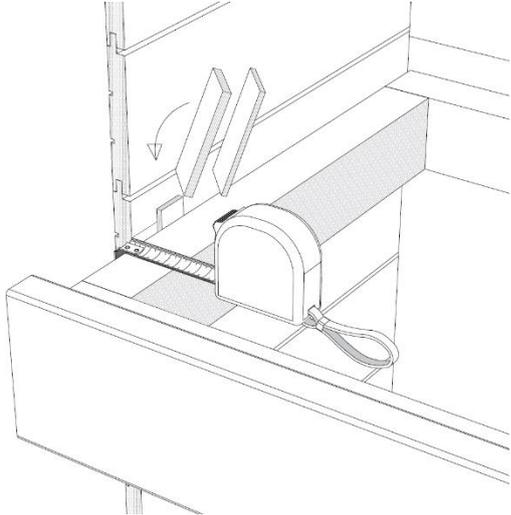





SUPPORTING A BENCH

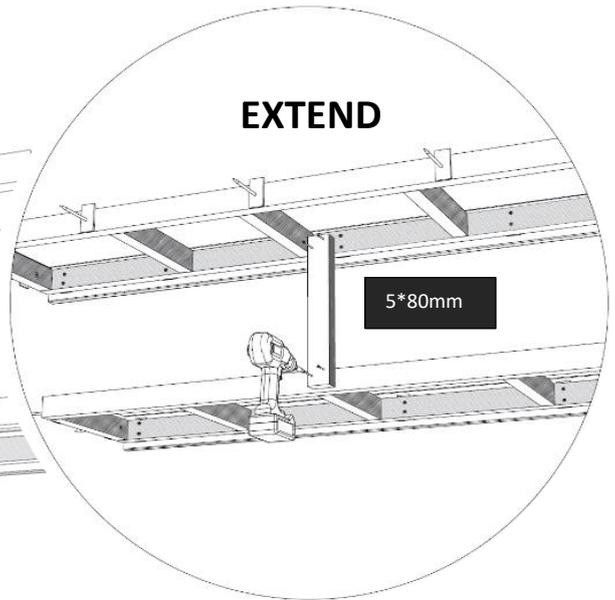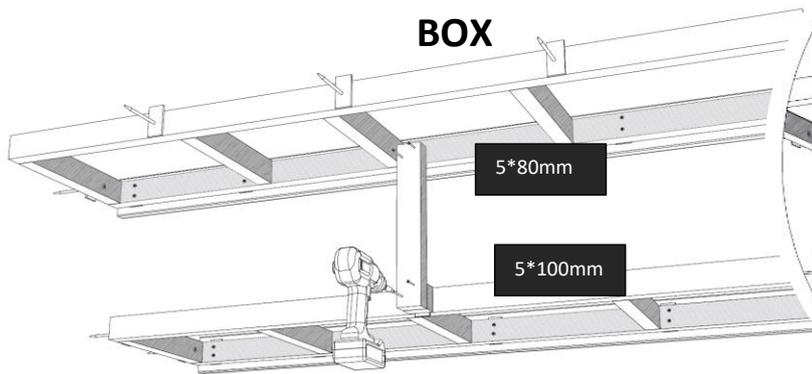

IF width of lower bench is over 1600mm, bench support is needed.

IF width of bench < 1800, install supportive leg for lower bench as in picture **ABOVE**.



IF width of lower bench > 1800, install supportive leg for BOTH of benches as in picture **BELOW**.

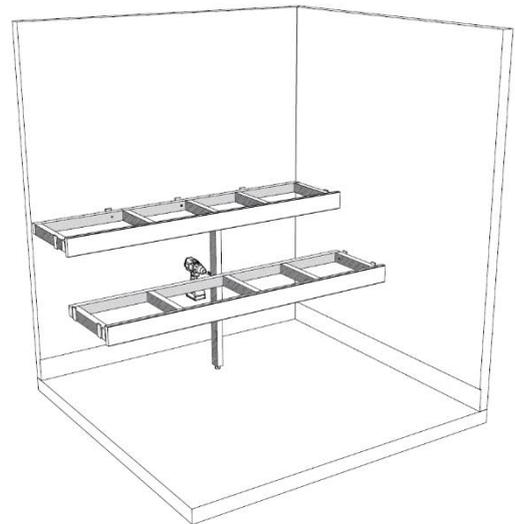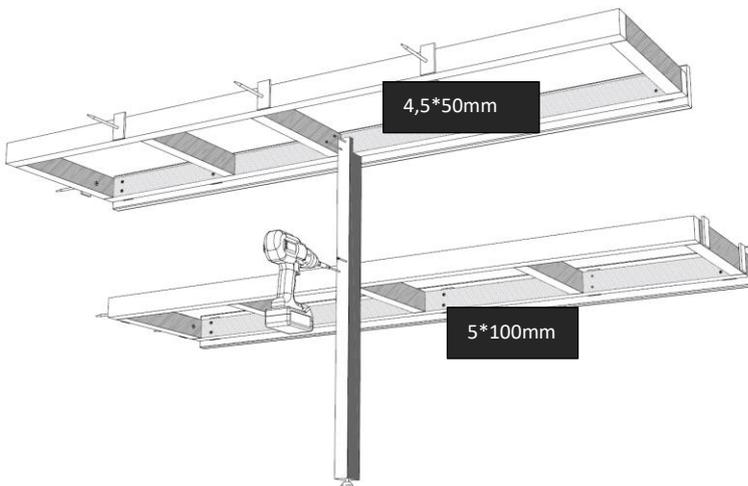

BLOCK AIR ->


IF width of lower bench is over 1800mm, bench support is needed.

Install supportive leg from behind of bench frame.


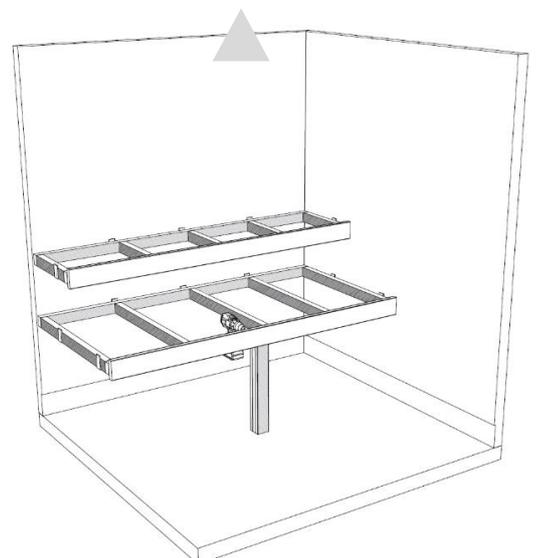
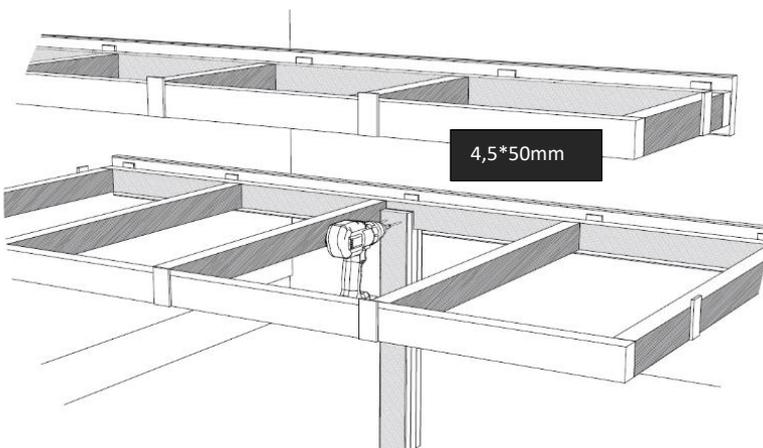






BENCH SKIRTS

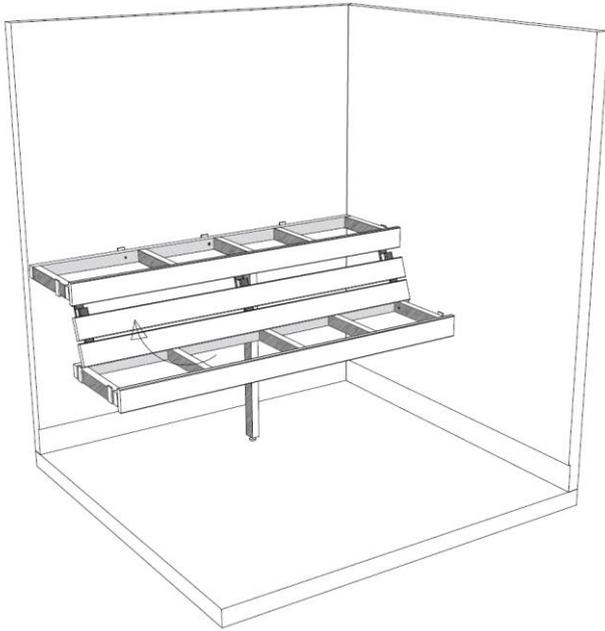




Install bench skirts behind front board of upper bench frame.

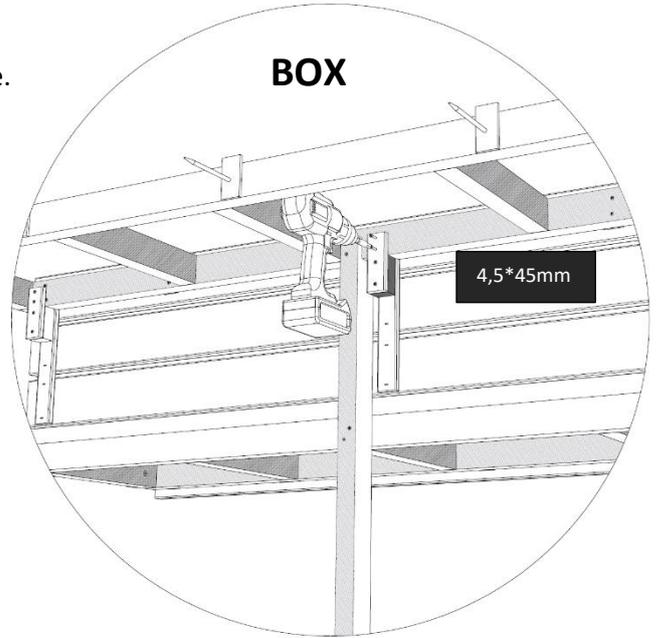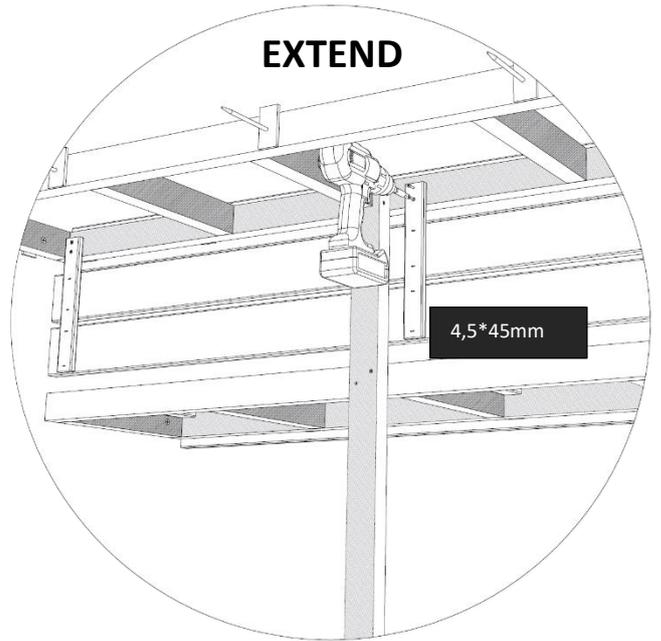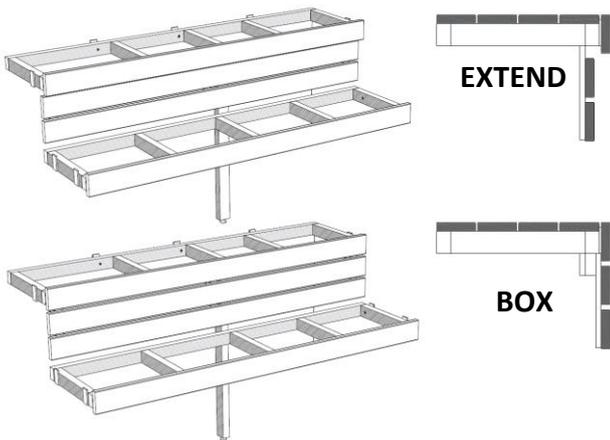

BENCH DECKS

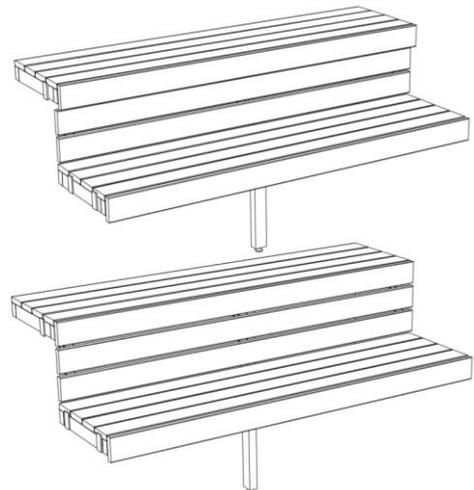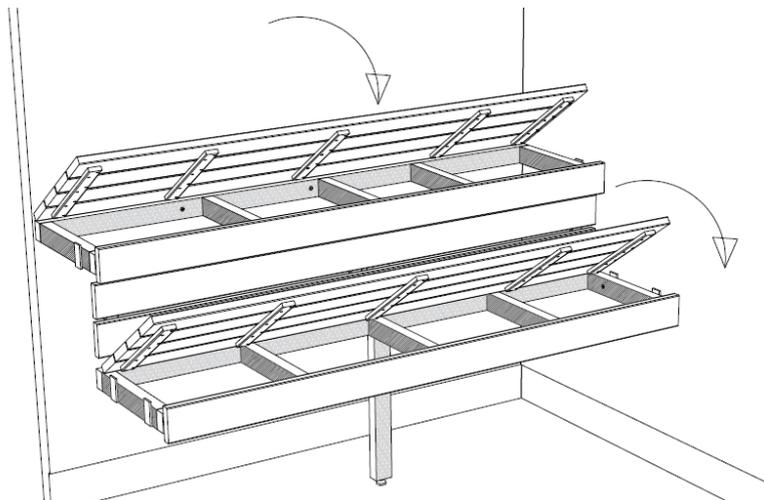

BENCH DECKS (AIR)

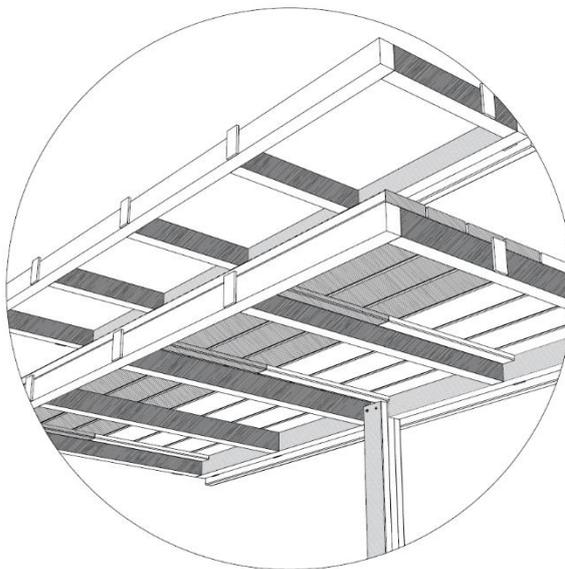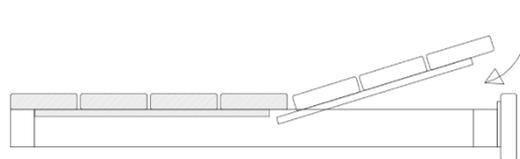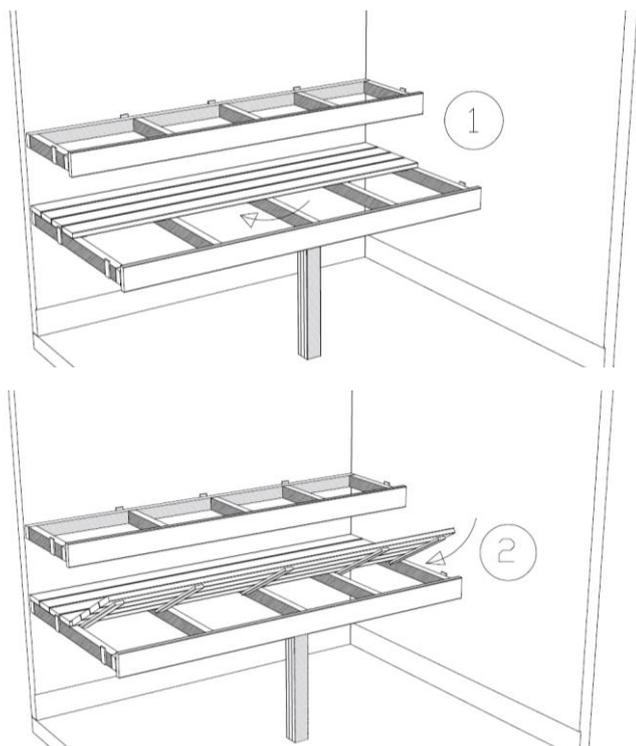

Big bench decks are made of several pieces to ease installation and cleaning.



suos



BACK RESTS





Picture indicates recommended height of back rest according to upper bench. Measure, predrill and install. Wires of LED-lights are recommended to be installed behind wall boards.

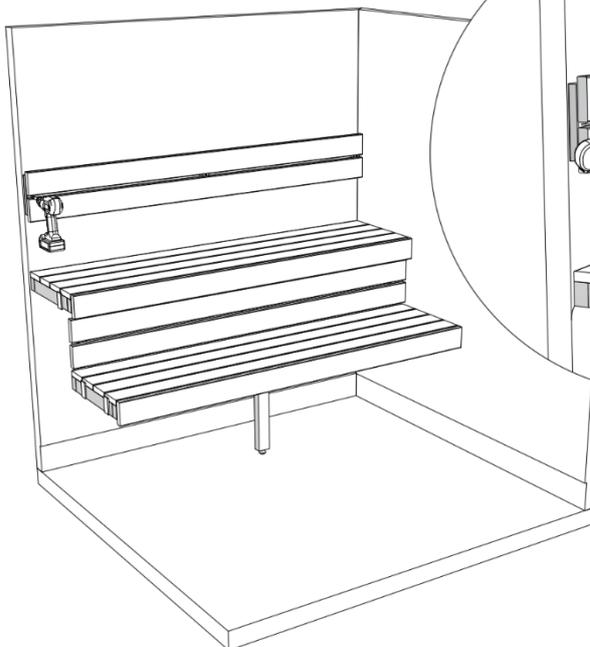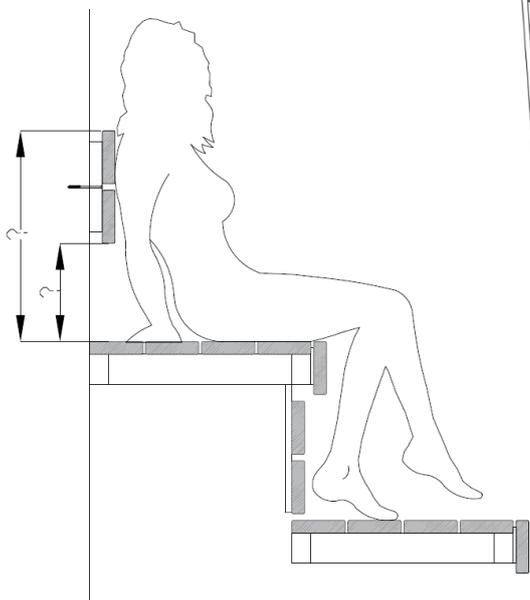



TIP! You can choose height of back rests also according to user.




FOOTREST

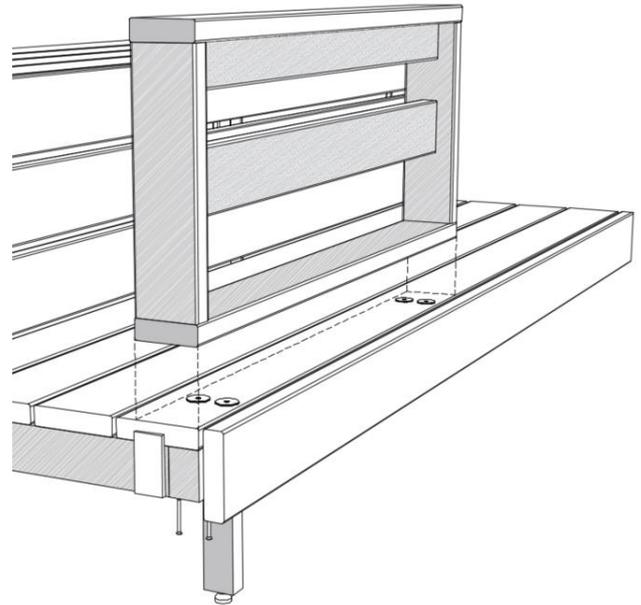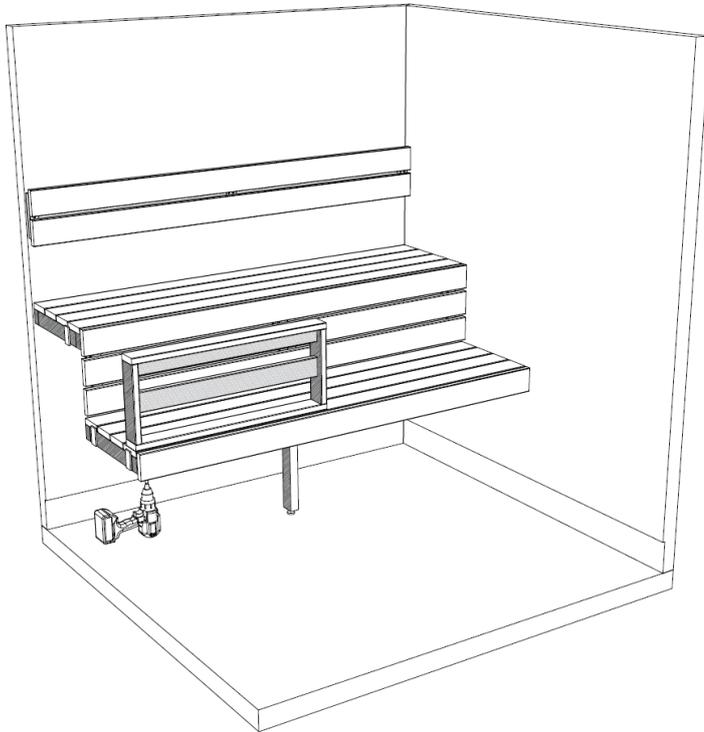


Place footrest on place and mark with pen. Mark places of screws with rubber washers and drill screw holes through deck boards. Place footrest onto rubber washers (2 layers) and screw underneath deck.

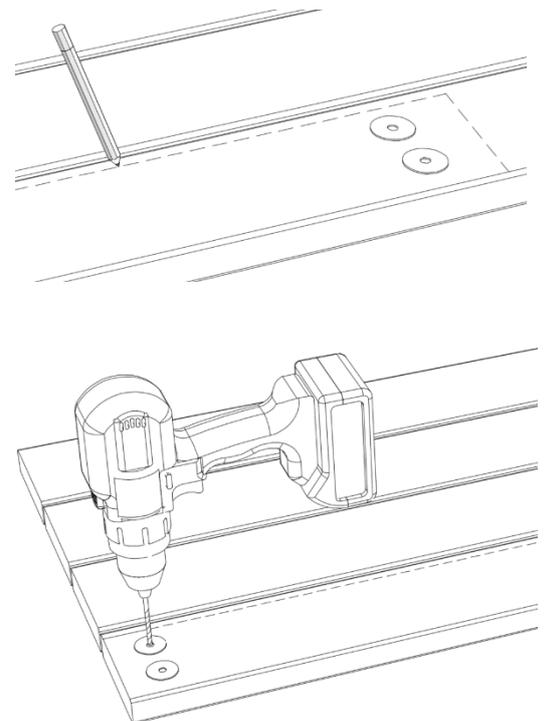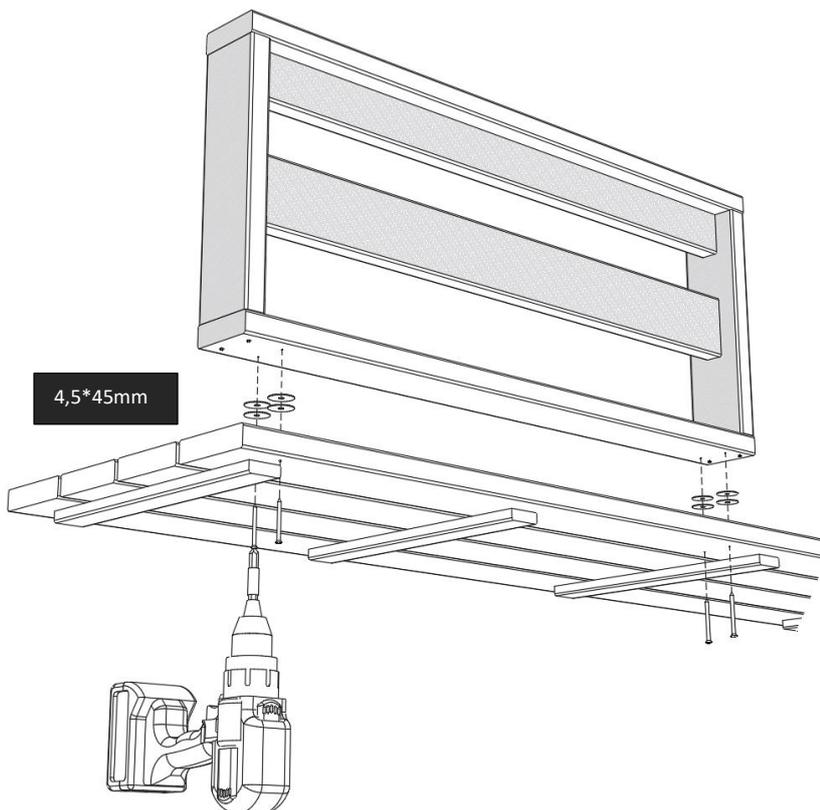


STOOLS

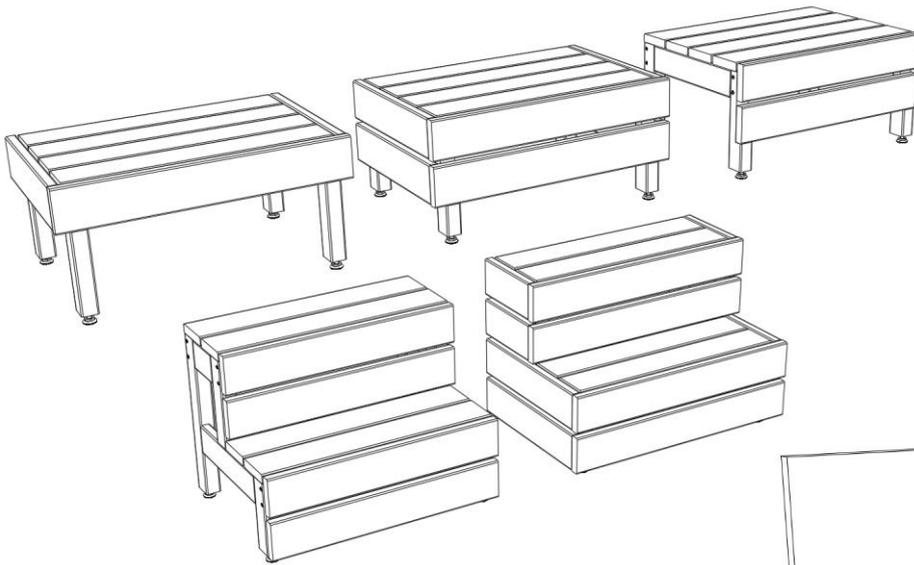

Stools are preassembled.


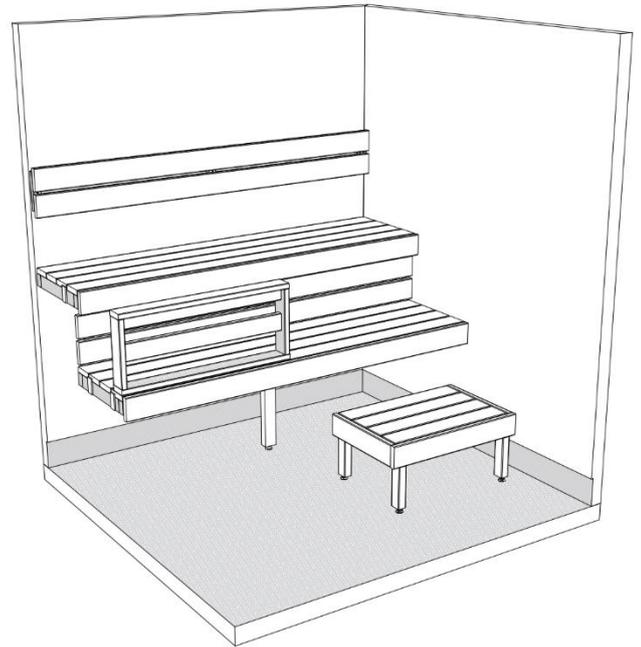


CORNER BENCHES

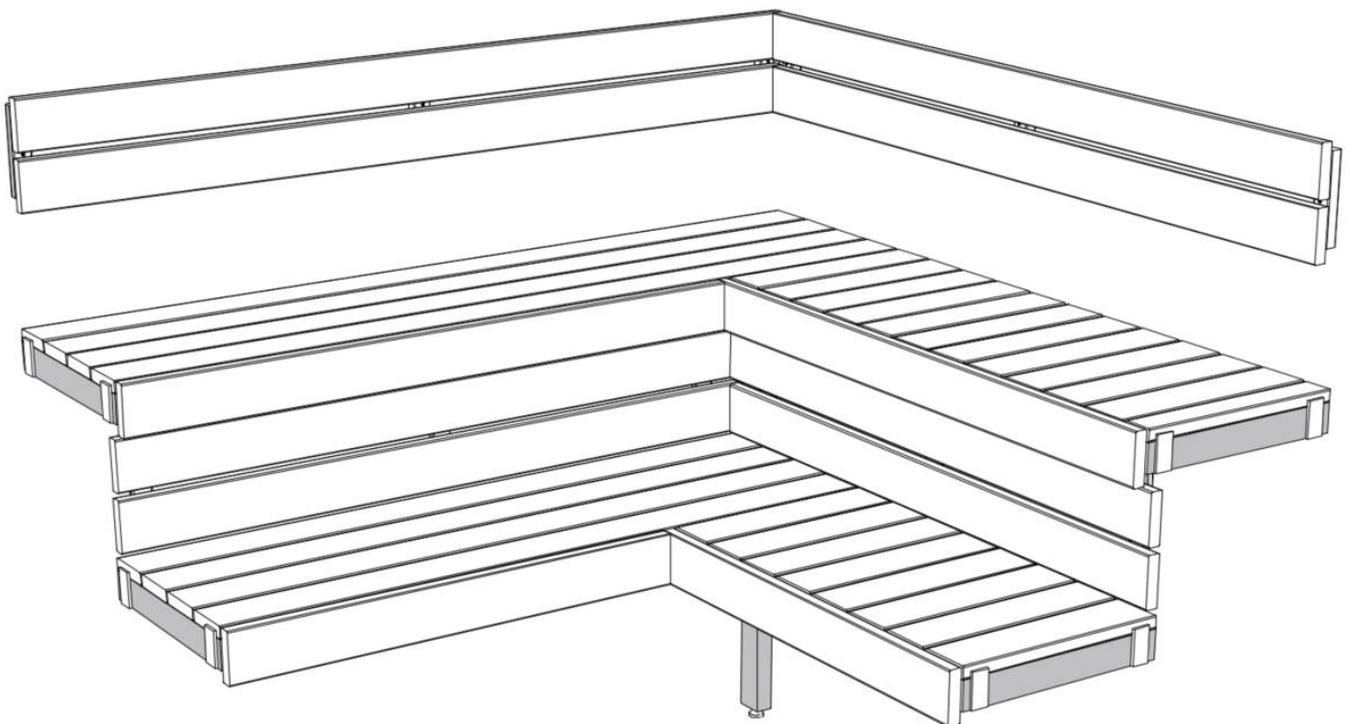






BENCH FRAMES

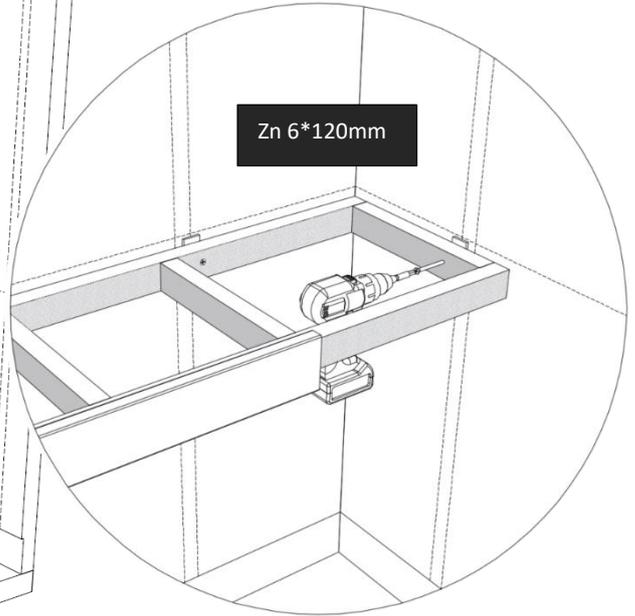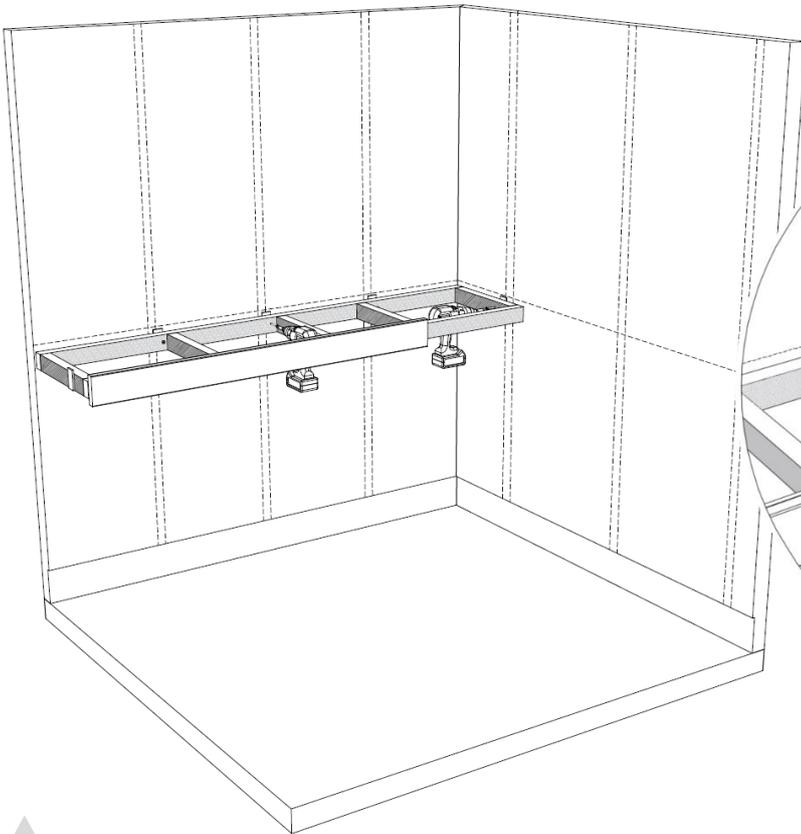


Install upper benches onto frames behind panels.

Mount benches together from two directions!

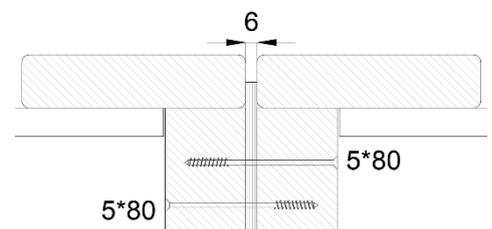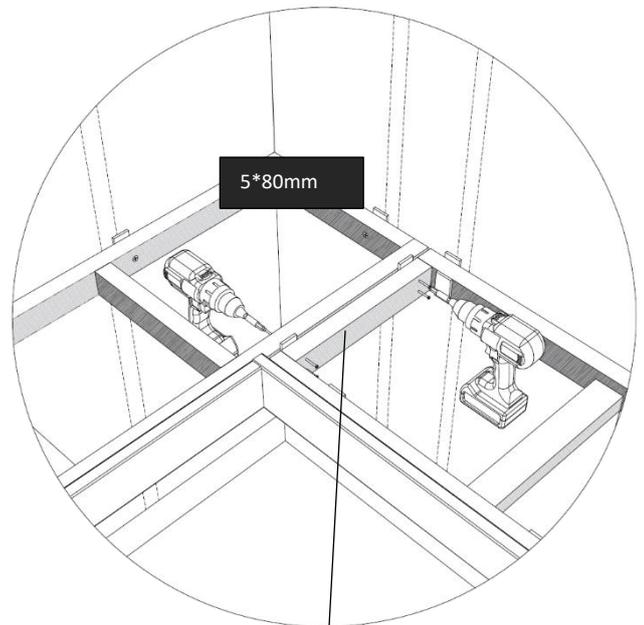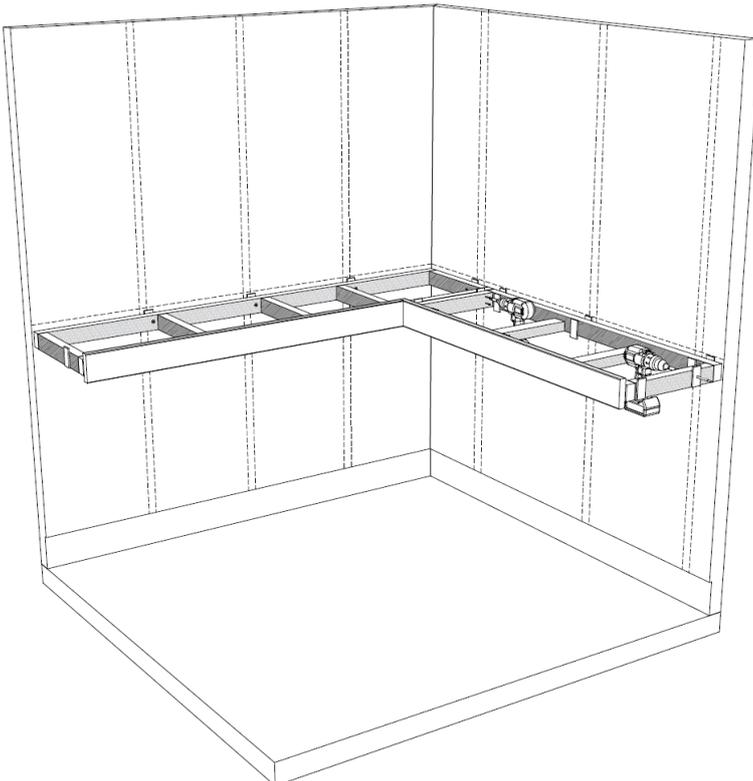




SUPPORTIVE LEG

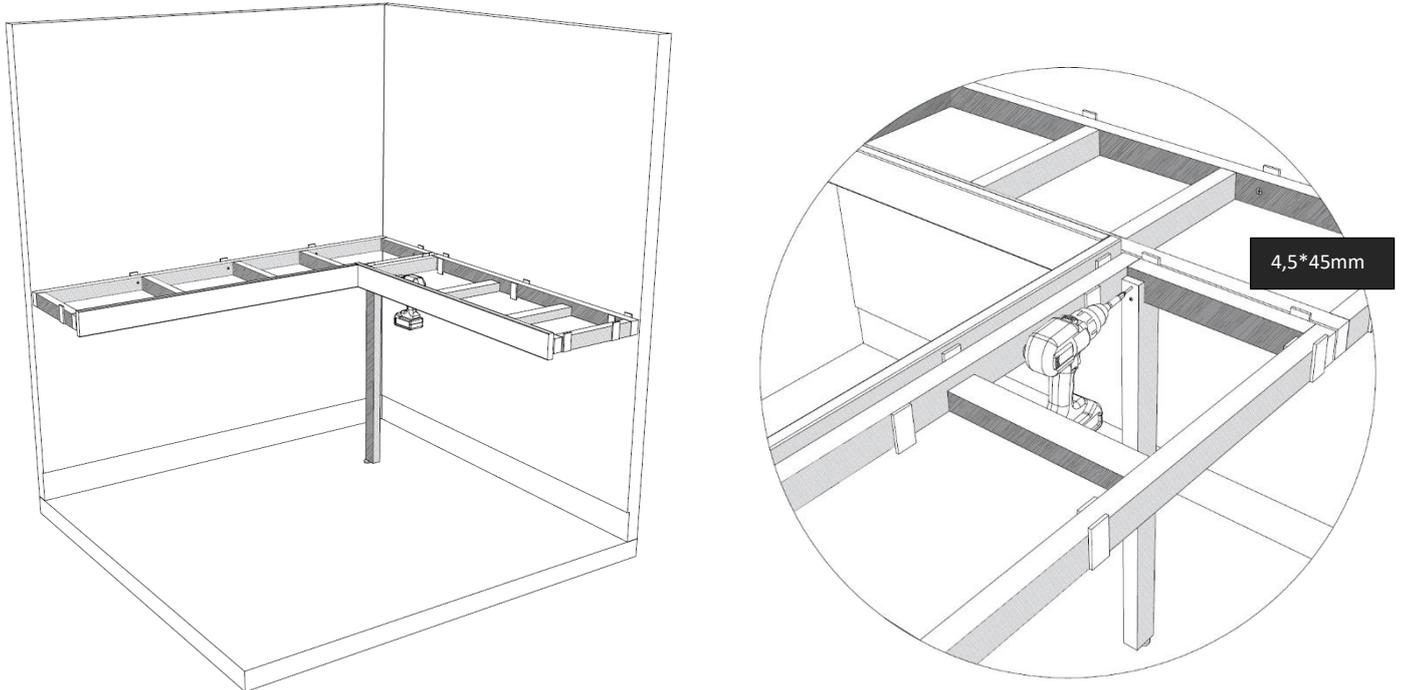

Install supportive leg into joint of benches. Lower bench will also be supported with supportive leg.

LOWER BENCHES




Install first bench onto wall and onto supportive leg. Mount benches together from two directions!

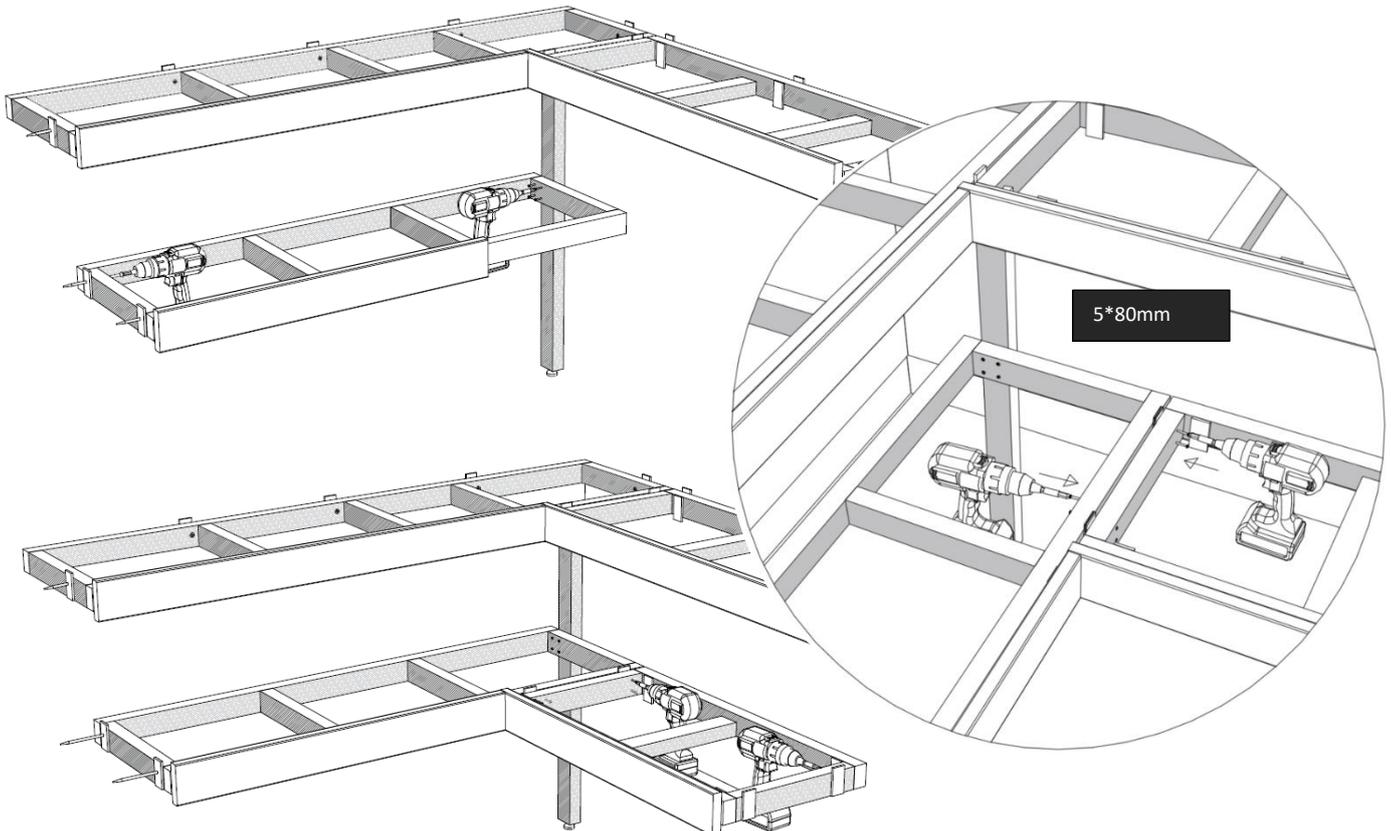




BENCH SKIRTS


Install bench skirts behind front board of upper bench frame.

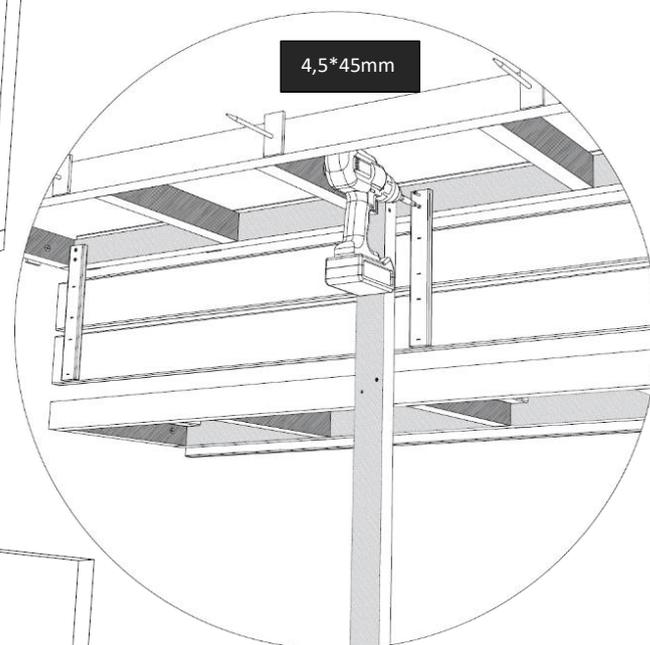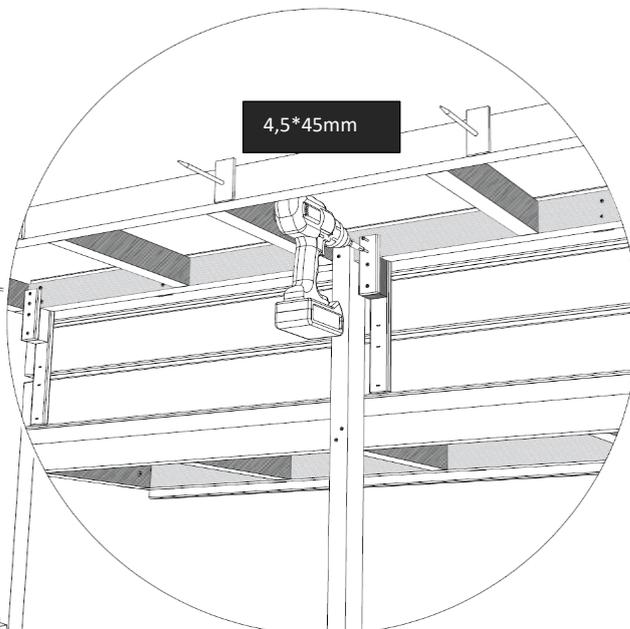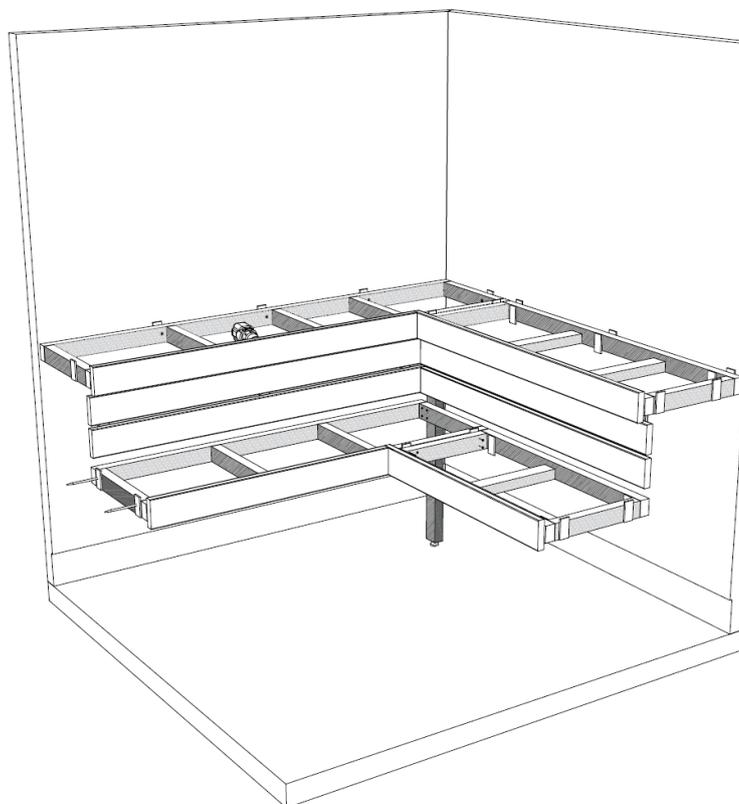

BENCH DECKS

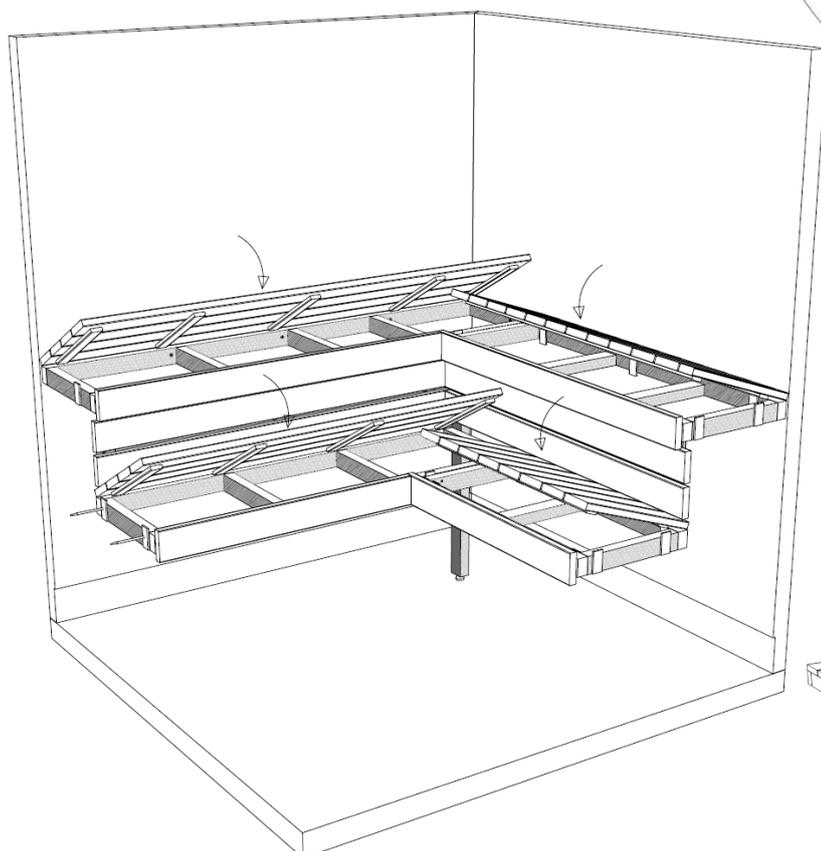


Lift and turn decks carefully on places. Right position is marked in every deck.

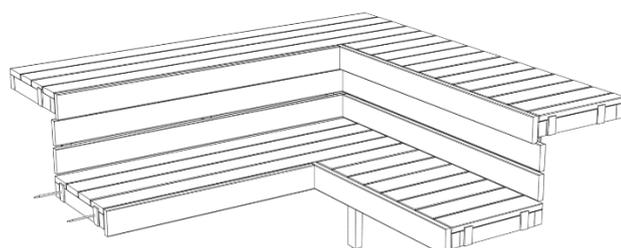






BACK RESTS

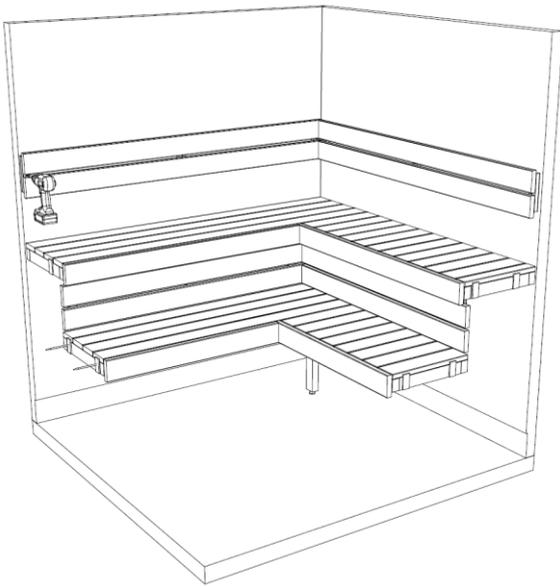

Picture indicates recommended height of back rest according to upper bench. Measure, predrill and install.


Wires of LED-lights are recommended to be installed behind wall boards.

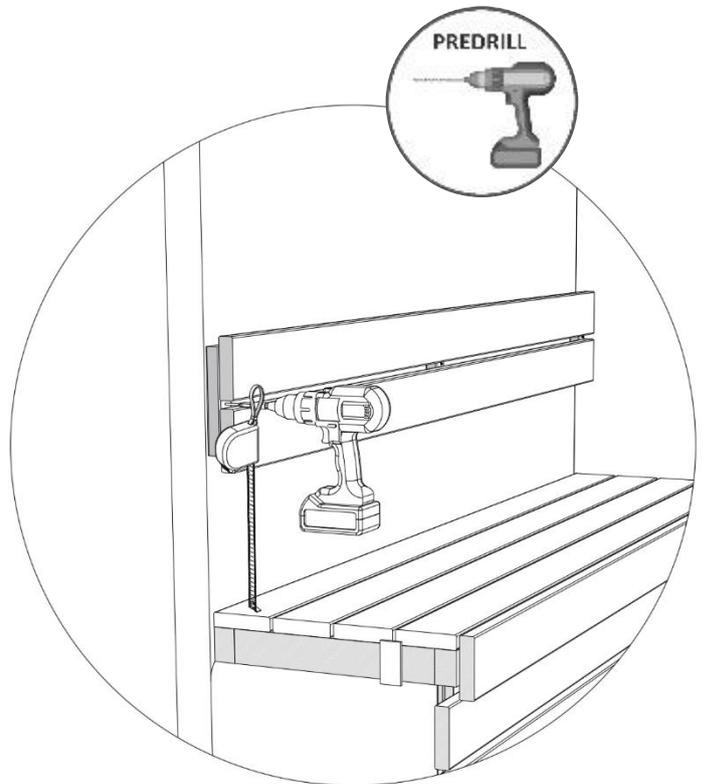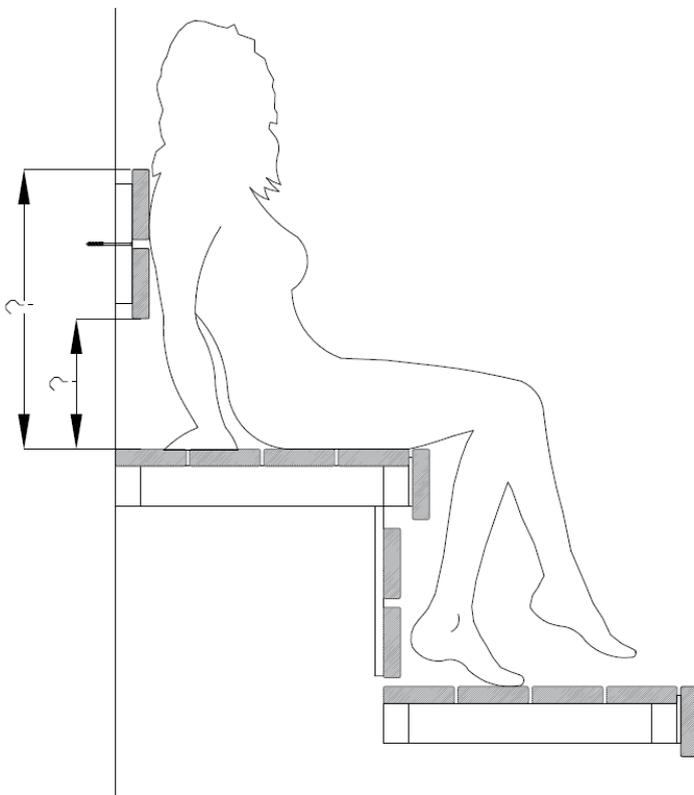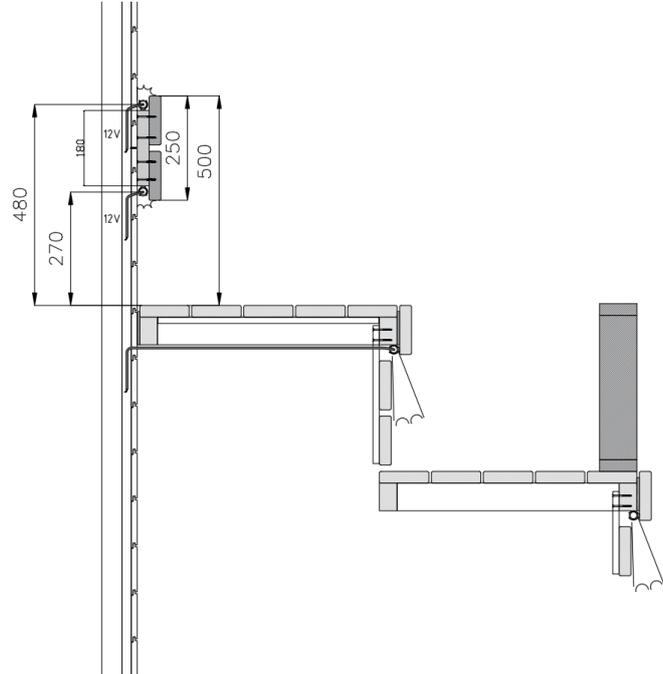





TIP! You can choose height of back rests also according to user.



FOOT REST

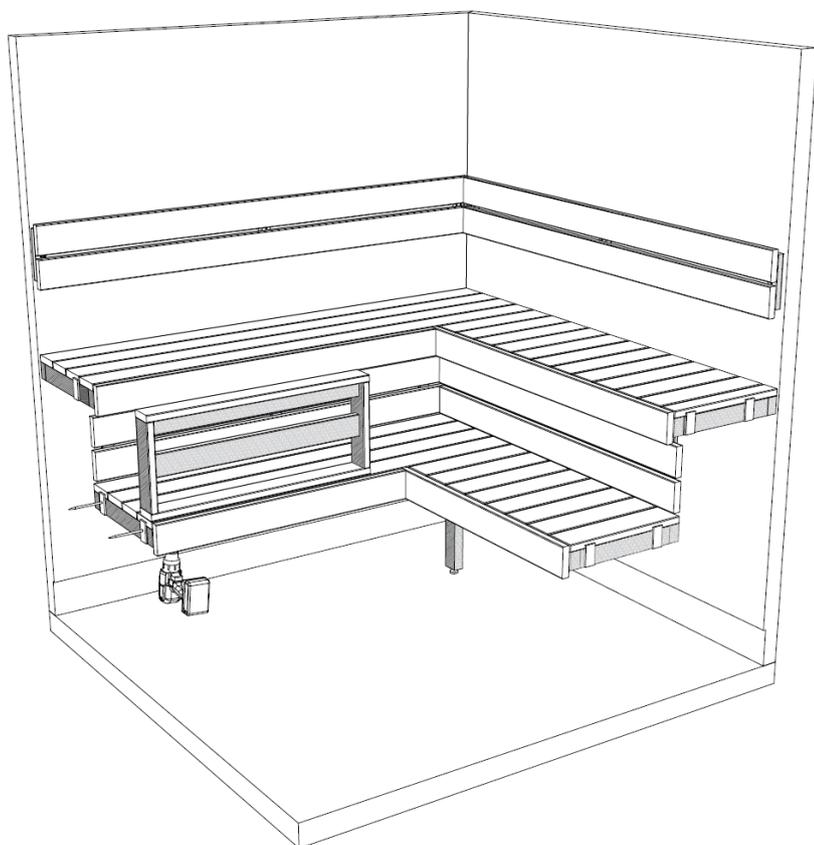


Place footrest on place and mark with pen. Mark places of screws with rubber washers and drill screw holes through deck boards. Place footrest onto rubber washers (2 layers) and screw underneath deck.

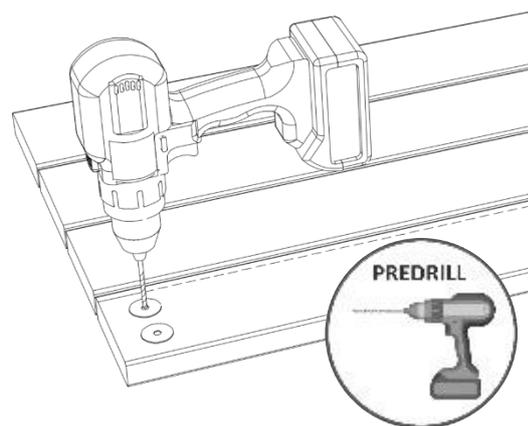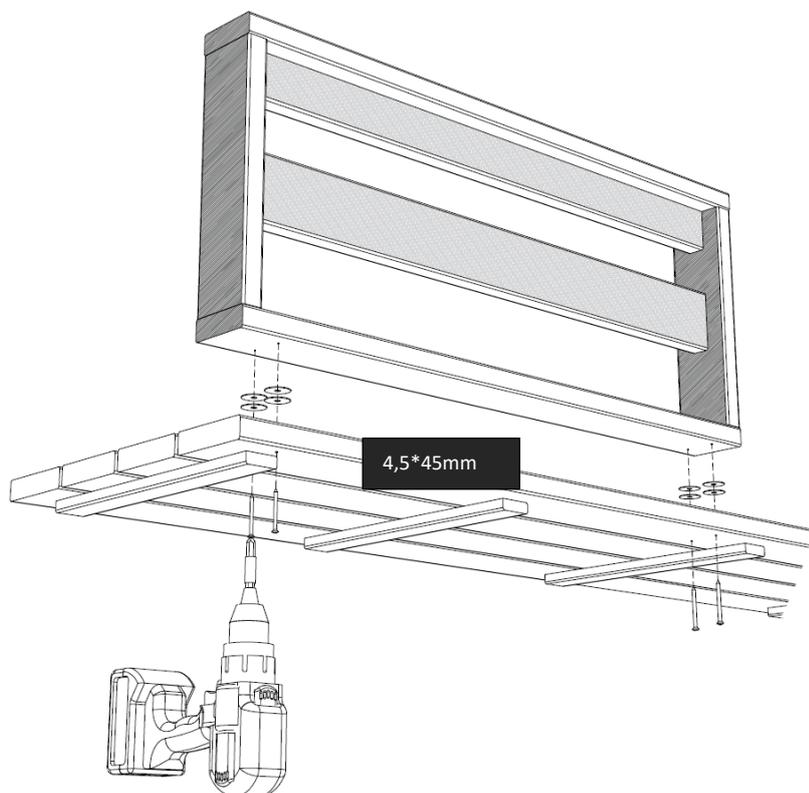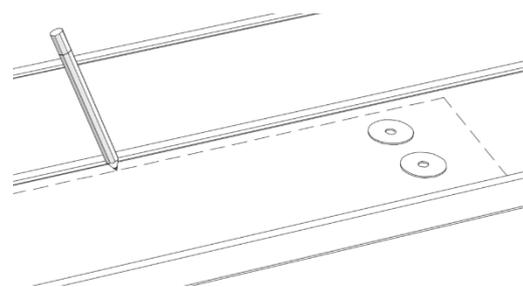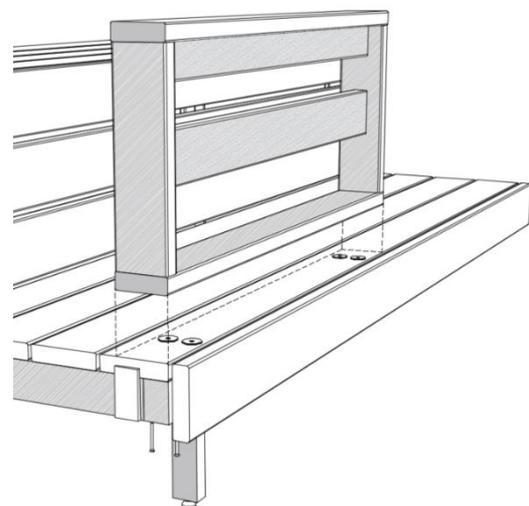




ROUNDING OF BENCH

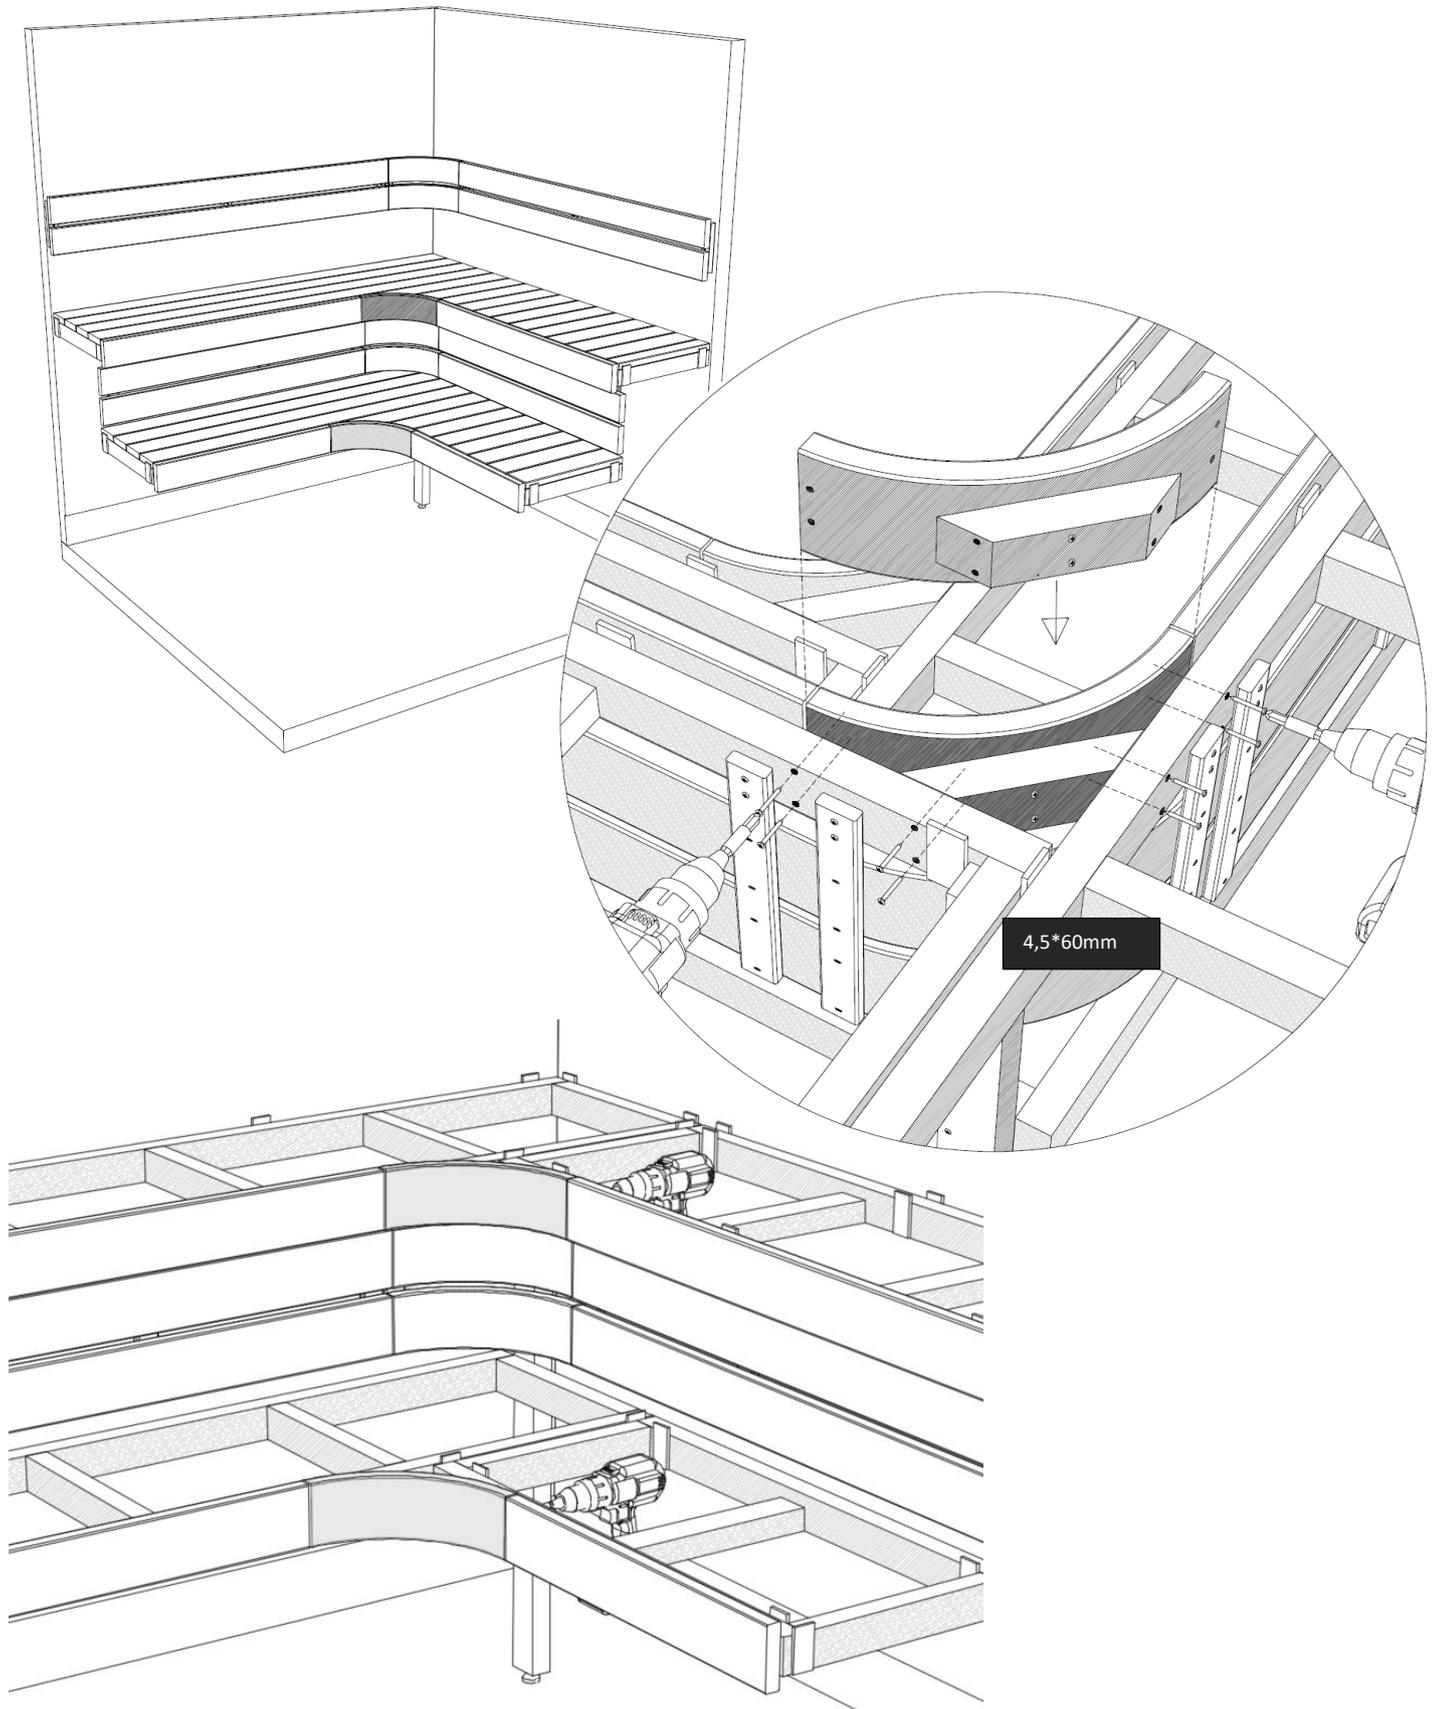




ROUNDING OF BENCH SKIRT


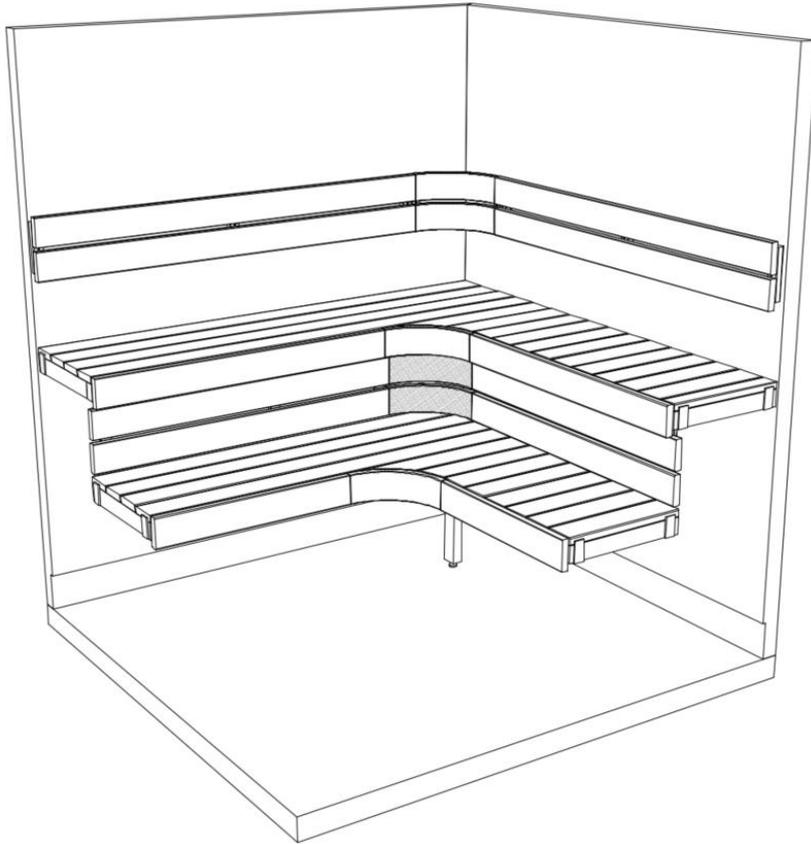


Installation as bench skirt.
Look page 13.

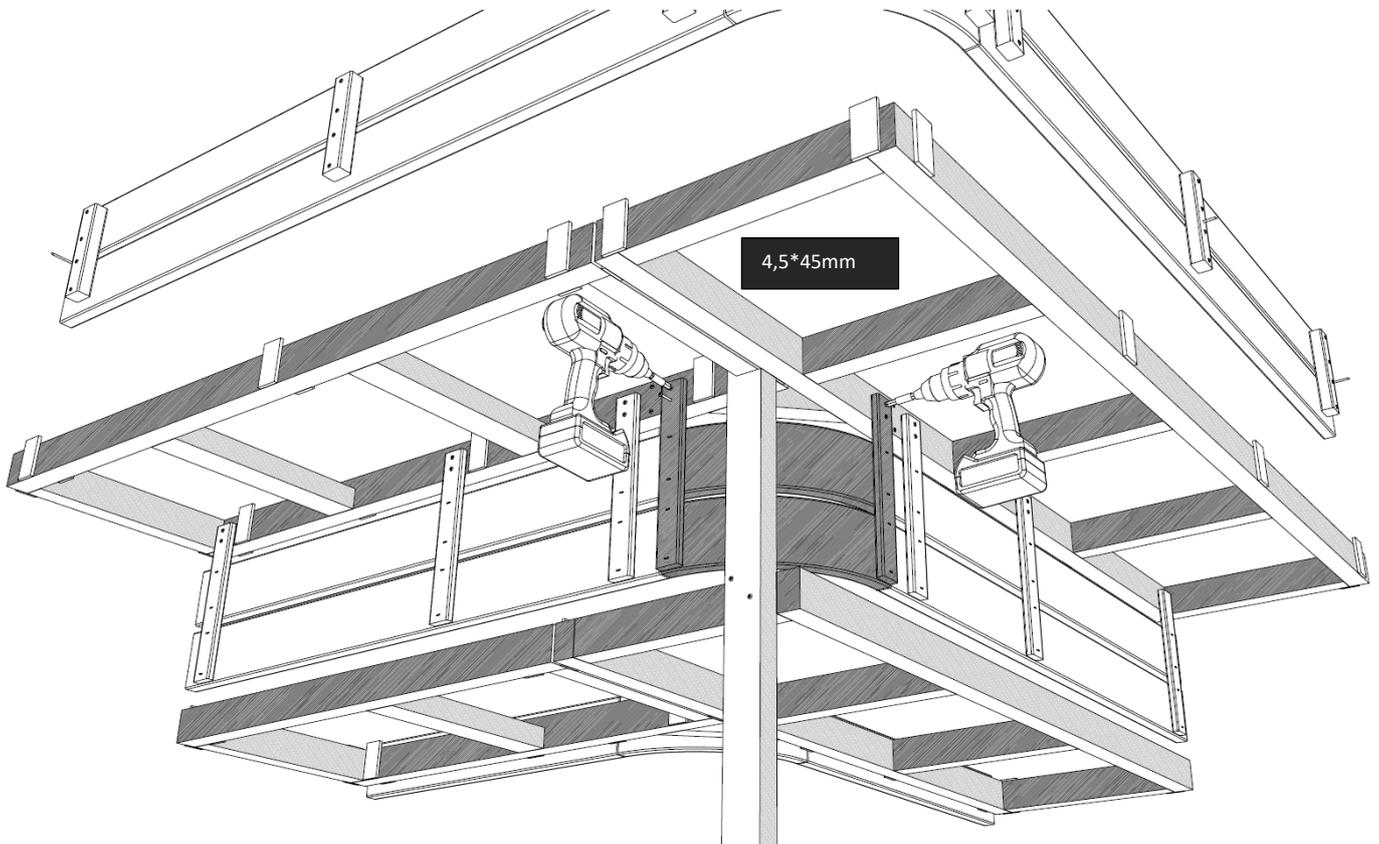






ROUNDING OF BACK REST

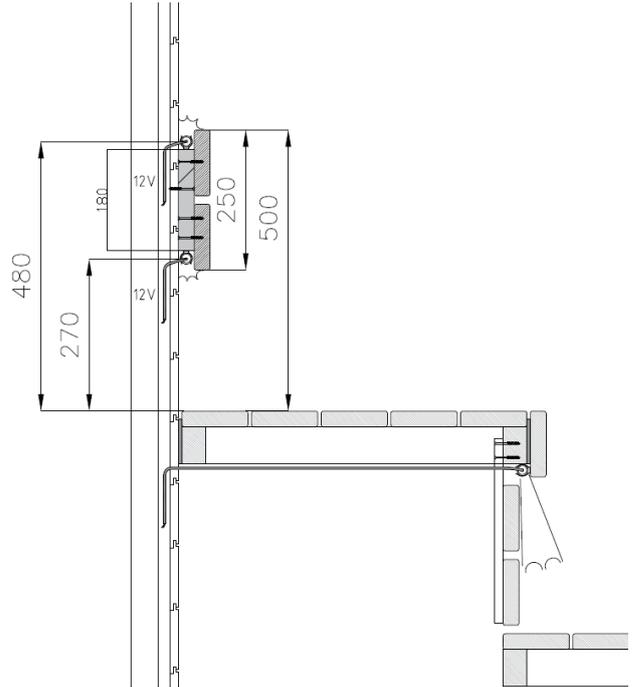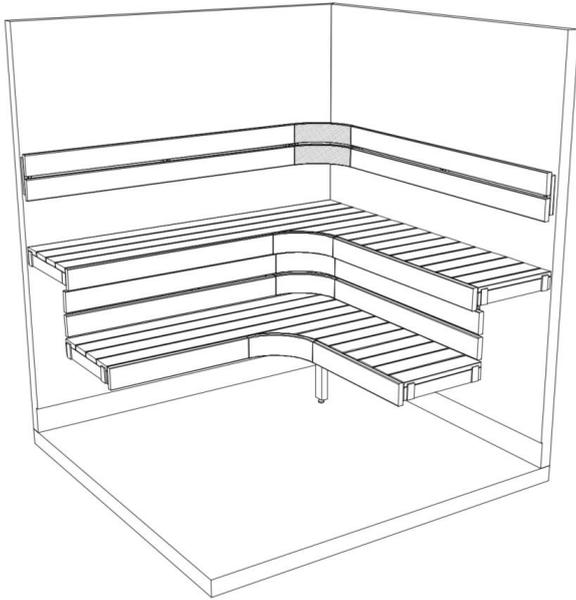

Installation as back rest. Look page 14.

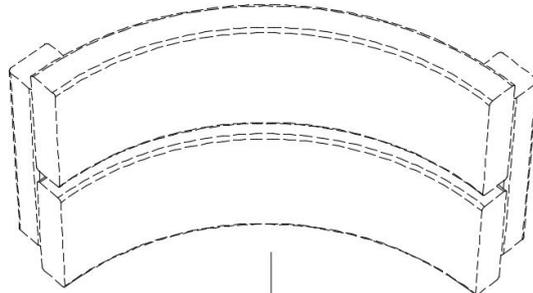


4,5*45mm

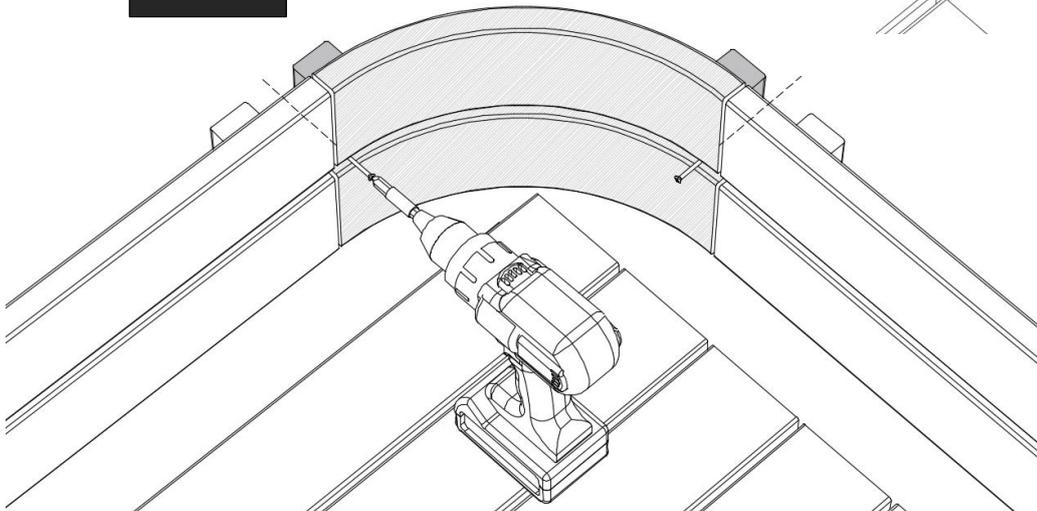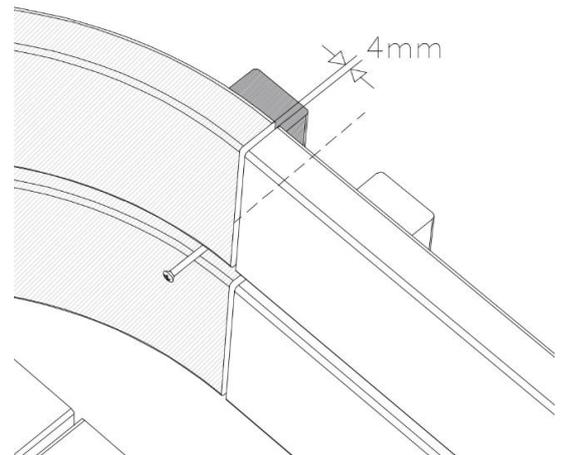







DECORATIVE BENCH END

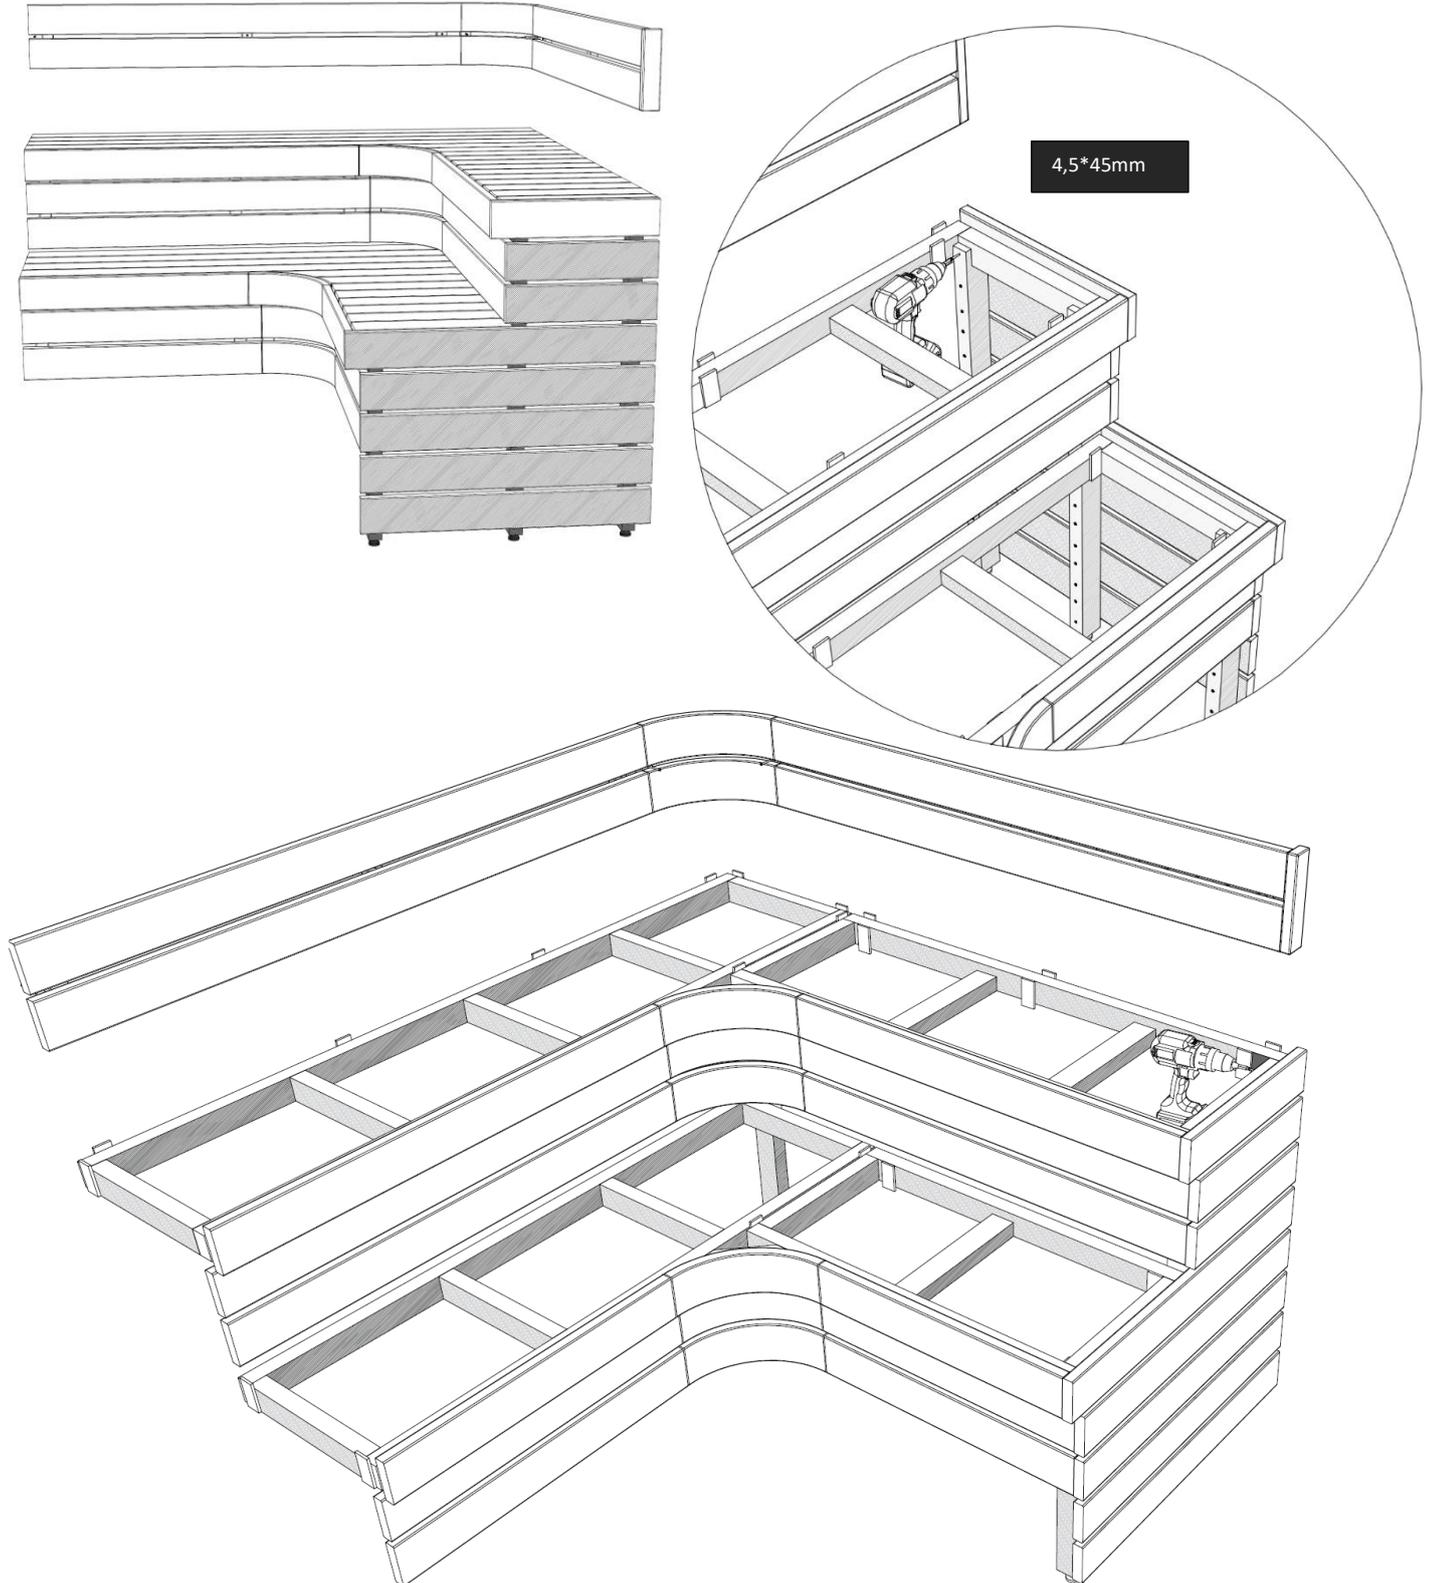



ARM REST

Installation as footrest. Look page 16.

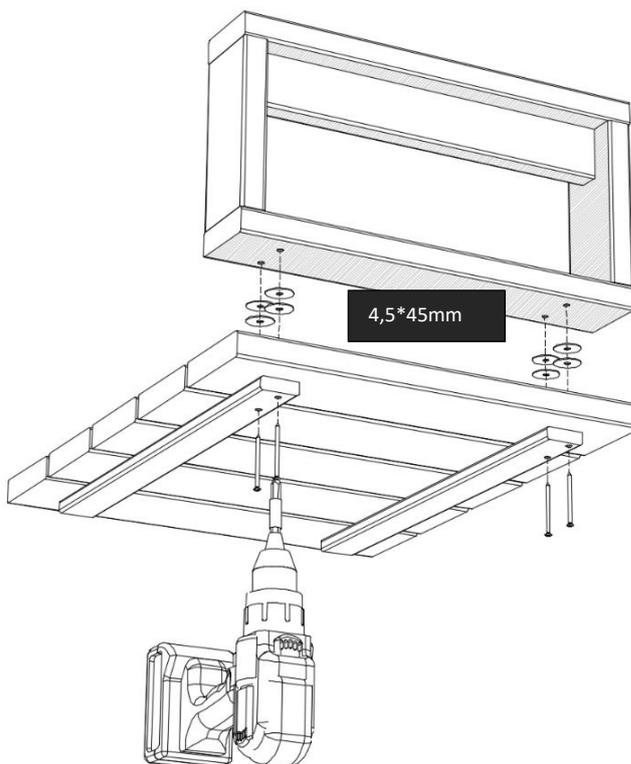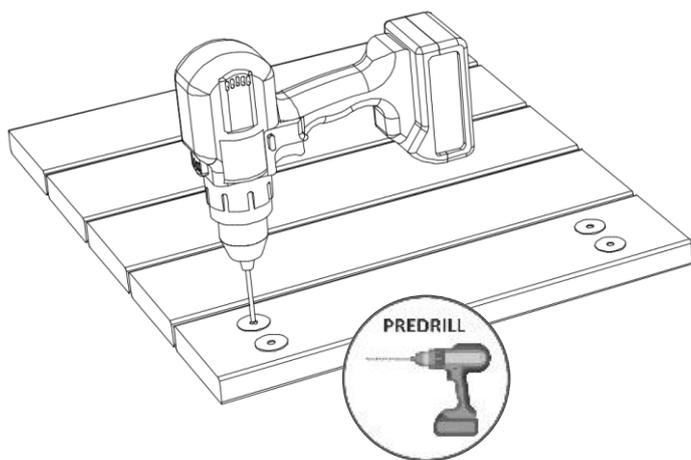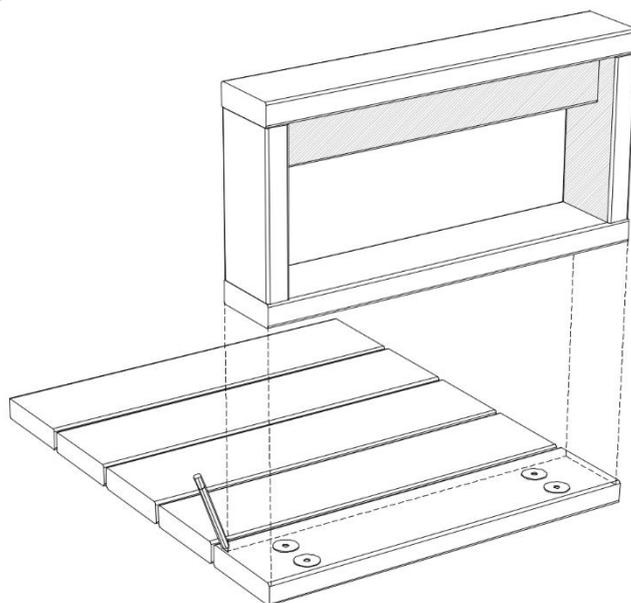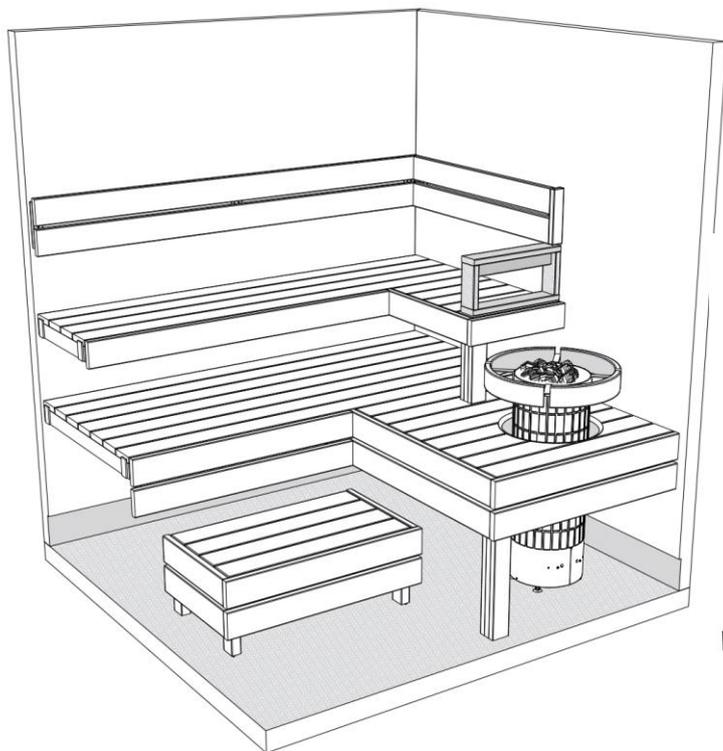


Place arm rest on place and mark with pen. Mark places of screws with rubber washers and drill screw holes through deck boards. Place footrest onto rubber washers (2 layers) and screw underneath deck.



LED-LIGHTS

Behind back rests

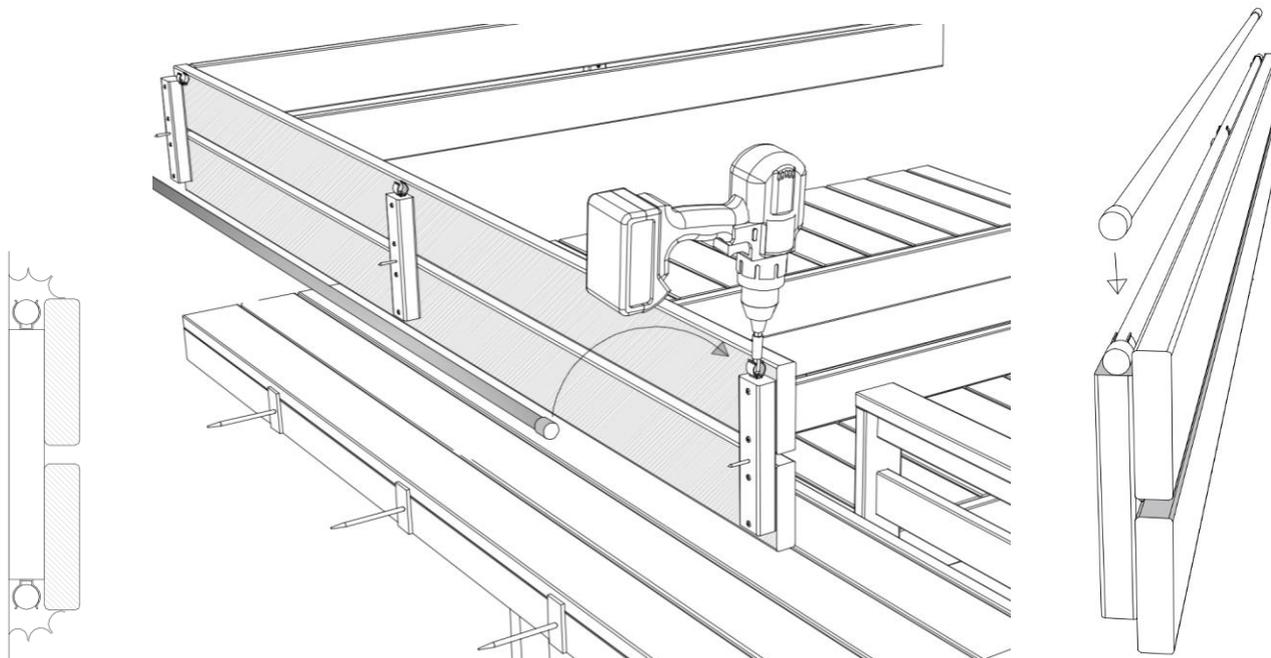

Under benches

